



motorola **C168i**

**User's Guide**



# HELLOMOTO

---

Introducing your new Motorola C168i GSM wireless phone. Here's a quick anatomy lesson.



Motorola, Inc.  
Consumer Advocacy Office  
1307 East Algonquin Road  
Schaumburg, IL 60196  
[www.hellomoto.com](http://www.hellomoto.com)

**Note:** Do not ship your phone to the above address. If you need to return your phone for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-331-6456 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain mobile phone features are dependent on the capabilities and settings of your service provider's network. Additionally, certain features may not be activated by your service provider, and/or the provider's network settings may limit the feature's functionality. Always contact your service provider about feature availability and functionality. All features, functionality, and other product specifications, as well as the information contained in this user's guide are based upon the latest available information and are believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

MOTOROLA and the Stylized M Logo are registered in the US Patent & Trademark Office. All other product or service names are the property of their respective owners.

© 2008 Motorola, Inc. All rights reserved.

**Caution:** Changes or modifications made in the radio phone, not expressly approved by Motorola, will void the user's authority to operate the equipment.

#### Software Copyright Notice

The Motorola products described in this manual may include copyrighted Motorola and third-party software stored in semiconductor memories or other media. Laws in the United States and other countries preserve for Motorola and third-party software providers certain exclusive rights for copyrighted software, such as the exclusive rights to distribute or reproduce the copyrighted software. Accordingly, any copyrighted software contained in the Motorola products may not be modified, reverse-engineered, distributed, or reproduced in any manner to the extent allowed by law. Furthermore, the purchase of the Motorola products shall not be deemed to grant either directly or by implication, estoppel, or otherwise, any license under the copyrights, patents, or patent applications of Motorola or any third-party software provider, except for the normal, non-exclusive, royalty-free license to use that arises by operation of law in the sale of a product.

Manual Number: 68000201388-A

# menu map

## main menu



### Phonebook



### Recent Calls

- Received Calls
- Dialed Calls
- Notepad
- Erase All
- Call Time\*
- Call Cost\*
- GPRS Data Counter\*
- GPRS Connection Time\*



### Messages

- Create Message
- Message Inbox
- Outbox
- Drafts
- Voicemail\*
- Browser Msgs\*
- Quick Notes
- MMS Templates



### Tools

- Calculator
- Calendar
- Shortcuts
- Chat\*
- SIM Toolkit \*



### Games



### WebAccess

- Browser
- Web Shortcuts
- Go to URL
- History
- Web Sessions
- Web Settings



### Multimedia

- Pictures
- Sounds



### Alarm Clock



### Settings

- (see next page)

\* network or subscription  
dependent features

This is the standard main menu  
layout. Your phone's menu may be  
a little different.

## settings menu



### Personalize

- Home Screen
- Color Style
- Wallpaper
- Quick Dial



### Ring Styles

- Style
- (Style) Detail



### Call Forward\*

- When Busy
- No Reply
- Not Reachable
- Not Available
- All Calls
- Cancel All



### In-Call Setup

- In-Call Timer
- Call Cost Setup
- Show Number
- Call Waiting\*
- Anykey Answer
- Open to Answer
- Session Information
- Auto Redial



### Headset & Car Setting

- Auto Answer



### Initial Setup

- Time and Date
- Backlight
- TTY Setup
- Language
- Contrast
- Input Mode
- Connection Indication
- Status Indicator
- Master Reset
- Master Clear



### Auto Power Off



### Phone Status

- My Tel. Number
- Active Line\*
- Battery Meter



### Security

- Phone Lock
- Lock Application
- Fixed Dial\*
- Call Barring\*
- SIM PIN
- New Passwords



### Network

- New Network
- Network Setup
- Available Networks
- Service Tone

\* network or subscription dependent features

This is the standard settings menu layout. Your phone's menu may be a little different.

# contents

---

<b>menu map</b> .....	<b>3</b>	text entry .....	19	call waiting .....	33
<b>Use and Care</b> .....	<b>7</b>	navigation key .....	26	caller ID .....	33
<b>essentials</b> .....	<b>8</b>	codes & passwords .....	26	emergency calls .....	34
about this guide .....	8	lock & unlock your phone .....	26	international calls .....	34
SIM card .....	9	<b>customize</b> .....	<b>28</b>	1-touch dial .....	34
battery .....	9	ring style .....	28	voicemail .....	34
turn it on & off .....	12	time & date .....	28	<b>other features</b> .....	<b>36</b>
make a call .....	13	wallpaper .....	29	advanced calling .....	36
answer a call .....	13	display appearance .....	29	phonebook .....	38
adjust the volume .....	13	answer options .....	30	messages .....	39
view your phone number ..	13	<b>calls</b> .....	<b>31</b>	chat .....	40
<b>main attractions</b> .....	<b>14</b>	turn off a call alert .....	31	personalizing .....	41
create & send a message ..	14	recent calls .....	31	phone alerts .....	43
receive a message .....	14	redial .....	32	miscellaneous .....	45
<b>basics</b> .....	<b>15</b>	return a call .....	32	call times and costs .....	45
display .....	15	notepad .....	32	handsfree .....	46
menus .....	18	hold a call .....	32	network .....	46

personal organizer . . . . .	46
security . . . . .	48
fun & games . . . . .	49
<b>service &amp; repairs . . . . .</b>	<b>51</b>
<b>SAR Data . . . . .</b>	<b>52</b>
<b>EU Conformance . . . . .</b>	<b>54</b>
<b>Safety Information . . . . .</b>	<b>56</b>
<b>Industry Canada Notice . . . .</b>	<b>60</b>
<b>FCC Notice . . . . .</b>	<b>60</b>
<b>Warranty . . . . .</b>	<b>61</b>
<b>Hearing Aids . . . . .</b>	<b>65</b>
<b>WHO Information . . . . .</b>	<b>66</b>
<b>Registration . . . . .</b>	<b>66</b>
<b>Export Law . . . . .</b>	<b>67</b>
<b>Recycling Information . . . . .</b>	<b>67</b>
<b>Perchlorate Label . . . . .</b>	<b>68</b>
<b>Privacy and Data Security . . .</b>	<b>68</b>
<b>Driving Safety . . . . .</b>	<b>69</b>
<b>index . . . . .</b>	<b>71</b>



# Use and Care

---

To care for your Motorola phone, please keep it away from:



## liquids of any kind

Don't expose your phone to water, rain, extreme humidity, sweat, or other moisture. If it does get wet, don't try to accelerate drying with the use of an oven or dryer, as this may damage the phone.



## extreme heat or cold

Avoid temperatures below 0°C/32°F or above 45°C/113°F.



## microwaves

Don't try to dry your phone in a microwave oven.



## dust and dirt

Don't expose your phone to dust, dirt, sand, food, or other inappropriate materials.



## cleaning solutions

To clean your phone, use only a dry soft cloth. Don't use alcohol or other cleaning solutions.



## the ground

Don't drop your phone.

# essentials


---



**CAUTION:** Before using the phone for the first time, read the *Important Safety and Legal Information* included in the gray-edged pages at the back of this guide.

## about this guide

This guide shows how to locate a menu feature as follows:

**Find it:**  > Recent Calls > Dialed Calls

This example shows that, from the home screen, you press  to open the menu, highlight and select **Recent Calls**, and then highlight and select **Dialed Calls**.

Press  to scroll to and highlight a menu feature. Press **SELECT** or  to select the highlighted menu feature.

### symbols



This means a feature is network, SIM card, or subscription dependent and may not be available in all areas. Contact your service provider for more information.



 
This means a feature requires an optional accessory.

# SIM card

Your *Subscriber Identity Module* (SIM) card contains your phone number, service details, and phonebook/message memory.

## install your SIM card

**Caution:** Do not bend or scratch your SIM card. Avoid exposing your SIM card to static electricity, water, or dirt.

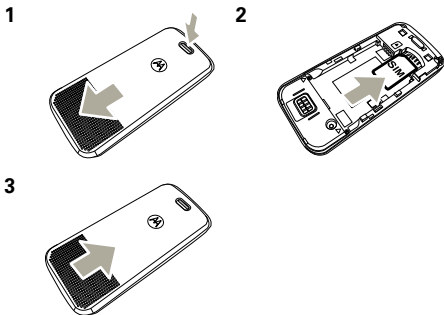

# battery

## battery use & safety

**IMPORTANT: HANDLE AND STORE BATTERIES PROPERLY TO AVOID INJURY OR DAMAGE.** Most battery issues arise from improper handling of batteries, and particularly from the continued use of damaged batteries.

### DON'Ts

- Don't disassemble, crush, puncture, shred, or otherwise attempt to change the form of your battery.
- **Don't let the phone or battery come in contact with water.** Water can get into the phone's circuits, leading to corrosion. If the phone and/or battery get wet, have them checked by your carrier or contact Motorola, even if they appear to be working properly.

- **Don't allow the battery to touch metal objects.** If metal objects, such as jewelry, stay in prolonged contact with the battery contact points, the battery could become very hot.
- **Don't place your battery near a heat source.** Excessive heat can damage the phone or the battery. High temperatures can cause the battery to swell, leak, or malfunction. Therefore:
  - Do **not** dry a wet or damp battery with an appliance or heat source, such as a hair dryer or microwave oven.
  - Avoid leaving your phone in your car in high temperatures.

- Do contact your service provider or Motorola if your phone or battery has been damaged from dropping or high temperatures.

**IMPORTANT: USE MOTOROLA ORIGINAL PRODUCTS FOR QUALITY ASSURANCE AND SAFEGUARDS.**

To aid consumers in identifying authentic Motorola batteries from non-original or counterfeit batteries (that may not have adequate safety protection), Motorola provides holograms on its batteries. Consumers should confirm that any battery they purchase has a "Motorola Original" hologram.

**Motorola recommends you always use Motorola-branded batteries and chargers.** Motorola mobile devices are designed to work with Motorola batteries. If you see a message on your display such as **Invalid Battery** or **Unable to Charge**, take the following steps:

- Remove the battery and inspect it to confirm that it has a "Motorola Original" hologram;

**DOs**

- **Do avoid dropping the battery or phone.** Dropping these items, especially on a hard surface, can potentially cause damage.

- If there is no hologram, the battery is not a Motorola battery;
- If there is a hologram, replace the battery and retry charging it;
- If the message remains, contact a Motorola Authorized Service Center.

**Important:** Motorola's warranty does not cover damage to the phone caused by non-Motorola batteries and/or chargers.

**Warning:** Use of a non-Motorola battery or charger may present a risk of fire, explosion, leakage, or other hazard.

## **PROPER AND SAFE BATTERY DISPOSAL AND RECYCLING**

Proper battery disposal is not only important for safety, it benefits the environment. Consumers may recycle their used batteries in many retail or service

provider locations. Additional information on proper disposal and recycling may be found on the Web:

- [www.motorola.com/recycling](http://www.motorola.com/recycling)
- [www.rbrc.org/call2recycle/](http://www.rbrc.org/call2recycle/) (in English only)

 
**Disposal:** Promptly dispose of used batteries in accordance with local regulations. Contact your local recycling center or national recycling organizations for more information on how to dispose of batteries.



**Warning:** Never dispose of batteries in a fire because they may explode.

## battery installation

1 2

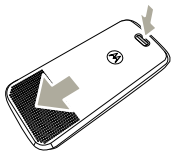


3



## battery charging

 
New batteries are shipped partially charged. Before you can use your phone, install and charge the battery as described below. Some batteries perform best after several full charge/discharge cycles.

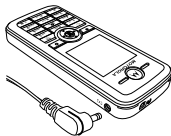

Plug the travel charger into your phone and an electrical outlet. The battery status indicator is lit during charging and goes off when charging is complete.

**Tip:** You can safely leave the travel charger connected to your phone after charging is complete. This will not damage the battery.

## turn it on & off

Press and hold  to turn on the phone. If prompted, enter your SIM card PIN code and press **OK** to unlock the SIM card.




**Caution:** If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays **SIM Blocked**. Contact your service provider.

If necessary, enter your 4-digit unlock code and press **OK** to unlock the phone.


**Note:** The phone unlock code can be 4 to 8 digits long. The default unlock code is 1234 (default code may be different in some regions – contact your service provider).

## make a call

Enter a phone number and press  to make a call.

 
To end the call, press  or close the phone.


## answer a call

When your phone rings and/or vibrates, just press  to answer.

To end the call, press  or close the phone.

## adjust the volume



Press  up to increase the volume in the earpiece or down to decrease the volume during a call.

## view your phone number

**Find it:**  > Settings > Phone Status > My Tel. Number

# main attractions

---

You can do much more with your phone than make and receive calls!

## create & send a message



A *Multimedia Messaging Service* (MMS) message contains one or more pages with text and embedded media objects (pictures or sounds). You can send the multimedia message to other wireless phones with MMS.

**Find it:**  > Messages > Create Message  
> New Multimedia Msg


- 1 Press keypad keys to enter text message.
- 2 Press **OPTIONS** to open the **MMS Menu**.

## 14 main attractions

- 3 Press **SEND** to send multimedia message.

## receive a message



When you receive a multimedia message, your phone displays the  indicator and **New Message**, and sounds an alert.

Press **VIEW** to open the message.

Multimedia messages that you receive can contain different media objects:

- Photos and animations are displayed as you read the message.
- A sound file begins playing when its page is displayed.

**Note:** In a multimedia message, you may have to highlight an indicator to play a sound file.



 
# basics

---


See page 1 for a basic phone diagram.

## display

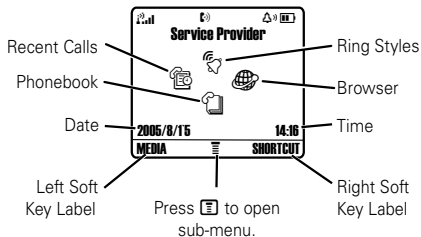

The home screen displays when you turn on the phone or when you are on a call. You must be in the home screen to dial a phone number.



Press the navigation key  left, right, up, or down to select one of the menu feature icons. If you select a

menu icon by mistake, press  to return to the home screen.

**Note:** Your home screen may look different from the display shown in the previous illustration. For example, your service provider may hide the menu icons to allow a better view of the wallpaper image. You can still select the menu icons when they are hidden from view. To show or hide the menu icons, see page 41.


When  displays, you can press  to enter the sub-menu.


Labels at the bottom corners of the display show the current *soft key* functions. Press the left or right soft key to perform the function indicated by the label.

Your phone can display the time and date in the home screen. For time & date setup, see page 41.



## status indicators

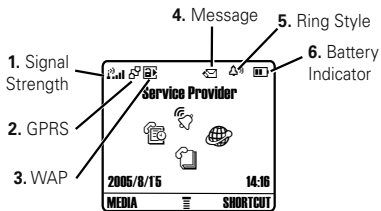 

Status indicators may be shown at the top of the home screen:




- 1 Signal Strength Indicator** – Vertical bars show the strength of the network connection. You can't make or receive calls when  is displayed.
- 2 GPRS Indicator** – GPRS-net connected and GPRS packet message can be sent.
- 3 WAP Indicator** – Via network (phone-to-computer data transfer is not supported).

- 4 Message Indicator** – Shows when you receive a new message, or when message memory is full. Indicators can include:

 = new text message  
 = voicemail message


 = new multimedia message  
 = active chat session

- 5 Ring Style Indicator** – Shows the ring style setting.

 = Loud

 = Vibe & Ring






 = Soft





 
 = Silent

 = Vibrating


- 6 Battery Indicator** – Vertical bars show the battery charge level. Recharge the battery when your phone shows **Low Battery**.


The following table describes other indicators your phone can display:

<b>alert/indicator</b>
 <b>GPRS service</b> Shows when the GPRS-net is connected and GPRS packet messages can be sent.
 <b>using GPRS</b> Shows when GPRS PDP is connected or loading.
 <b>uncoded web</b> Indicates an Uncoded Web server connection is present.
 <b>holding web</b> Indicates a Holding Web server connection is present.
 <b>coded web</b> Indicates a Coded Web server connection is present.

 
<b>alert/indicator</b>
 <b>call forward</b> Indicates that Call forward is enabled and all unanswered calls will be forwarded.
 <b>holding call</b> Indicates the current call is on hold.
 <b>silent mode</b> Indicates Silent mode is enabled.
 <b>alarm on</b> Shows when an alarm has been set.
 <b>web server transferring</b> Indicates Web Server is receiving & sending messages.





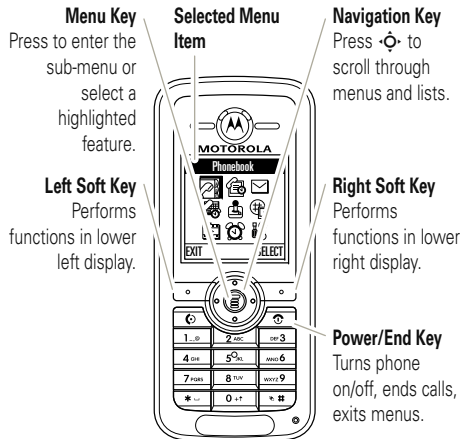




# menus

From the home screen, press  to enter the main menu.



**Note:** The menu icons may not be available depending on your service provider and service subscription options.




Press  to scroll to and highlight a menu feature icon in the main menu.

icon	feature	icon	feature
	Phonebook		WebAccess
	Recent Calls		Multimedia
	Messages		Alarm Clock
	Tools		Settings
	Games		

## select a menu feature

 
The following example shows how to select a menu feature, starting from the home screen:


**Find it:**  > Recent Calls > Dialed Calls


This example shows that from the home screen, you must press , scroll to and select  **Recent Calls** from the main menu, then scroll to and select **Dialed Calls**. Press  to scroll, and use the left or right soft keys to select the functions displayed in the bottom corners of the display.

## select a feature option

Some features require you to select an option from a list.

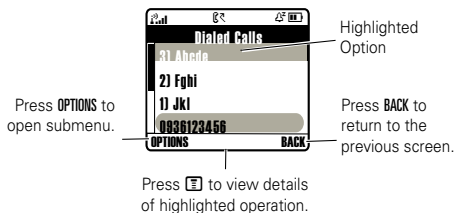


Press  up or down to highlight the option you want.

- In a numbered list, press a number key to highlight the option.
- When an option has a list of possible values, press  left or right to scroll through and select a value.
- When an option has a list of possible numeric values, press a number key to set the value.


## text entry

 Here are some examples of text entry in your phone. You can use different text entry modes.

You can make changes to **Phonebook** entries in terms of contact name, contact number, and speed dial number.

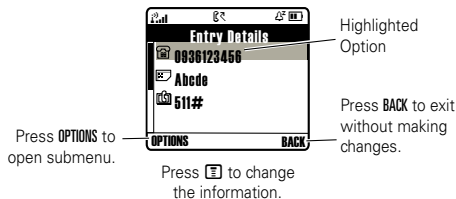

 You can create a new message by entering text in the message center. The *character counter* indicates how many more characters will fit in the message.

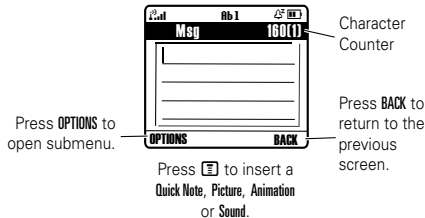

## text entry mode

Multiple text entry modes make it easy for you to enter names, numbers, and messages. The mode you select remains active until you select another mode. To change entry modes, press **[#]**.

### entry modes

- |                        |  |
|------------------------|--|
| <b>[1]</b> or <b>1</b> | Your <b>Primary</b> text entry mode can be set to any iTAP™ <b>[1]</b> or TAP <b>1</b> mode.   |
| <b>[2]</b> or <b>2</b> | Your <b>Secondary</b> text entry mode can be set to any iTAP <b>[2]</b> or TAP <b>2</b> mode, or set to <b>Disable</b> if you don't want a secondary entry mode. |
| <b>123</b>             | <b>Numeric</b> mode enters numbers only.   |

## set up a text entry mode

To set your **Primary** and **Secondary** text entry modes, press **OPTIONS > Input Setup** in a text entry view and select **Primary Setup** or **Secondary Setup**.

<b>TAP English</b>	Enter letters and numbers by pressing a key one or more times (see page 22).
<b>iTAP English</b>	Lets the phone predict each word as you press keys (see page 23).

## capitalization

Press **0** in any text entry screen to change the text case. The following indicators show capitalization status:

- ab** = no capital letters      **AB** = all capital letters  
**Ab** = capitalize next letter only

## text entry indicators

When you select the **Primary** or **Secondary** text entry mode, the following indicators identify the text entry setting:

<b>primary</b>	<b>secondary</b>	
<b>1</b>	<b>2</b>	TAP, no capital letters
<b>1↑</b>	<b>2↑</b>	TAP, capitalize next letter only
<b>1↑</b>	<b>2↑</b>	TAP, all capital letters
<b>1□</b>	<b>2□</b>	iTAP, no capital letters
<b>1↑□</b>	<b>2↑□</b>	iTAP, capitalize next letter only
<b>1↑□</b>	<b>2↑□</b>	iTAP, all capital letters

 
## tap mode

Press **#** in a text entry view to switch to **TAP** mode. If you don't see **Abc1** or **Abc2**, press **OPTIONS** > **Input Setup** to set **TAP** mode as your **Primary** or **Secondary** text entry mode.

To enter text in **TAP** mode, press a keypad key repeatedly to cycle through the letters and number on the key. Repeat this step to enter each letter.

Character displays at insertion point.

After 2 seconds, the character is accepted and the cursor moves to the next position.

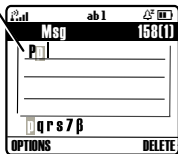


Press **DELETE** to erase the character to the left of the insertion point.

**Tip:** Press **⊙** up to accept a word completion; press **\*** to insert a space.

When you enter 3 or more characters in a row, your phone may guess the rest of the word. For example, if you enter **Pro** you might see:

 Press **⊙** up to accept Products, or press **\***/**⊙** down to reject it & enter space after **pro**.

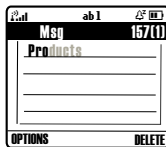

Character displays at insertion point.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

**Tip:** Press and hold **DELETE** to clear the whole page of text entered.

**Tip:** You can turn on/off the function of **Word Completion** by pressing **☰** > **Settings** > **Initial Setup** > **Input Mode** > **Word Completion**.






## character chart

Use this chart as a guide for entering characters.


 

1	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ¿ ¡ % £ \$ ¥ ¢ € + x * / \ [ ] = > < # §
2	a b c 2 ä å á à ã â æ
3	d e f 3 é è ê
4	g h i 4 î ï
5	j k l 5
6	m n o 6 ñ õ ö ø ó ò ô
7	p q r s 7 ß
8	t u v 8 ü ú û
9	w x y z 9
0	change text case, for capital letters
*	enter a space (hold to enter a return)
#	change text entry method (hold for default)

**Note:** This chart may not reflect the exact character set available on your phone.

## tap method text entry rules

- Press a keypad key repeatedly to cycle through its characters.
- Press  or  left or right to move the flashing cursor to the left or right in a text message.
- The first character of every sentence is capitalized.
- If you enter or edit information and do not want to save the changes, press  to exit without saving.

## iTAP™ mode

 
Press  in a text entry view to switch to iTAP mode. If you don't see  or , press **OPTIONS** > **Input Setup** to set iTAP mode as your **Primary** or **Secondary** text entry mode.

**iTAP** mode lets you enter words using one key press per letter. The **iTAP** software combines your key presses into common words, and predicts each word as you enter it.

For example, if you press **7**, **7**, **6**, **3**, the letter combinations that match your key presses display the word **Product**.

Press **☰** to lock highlighted combination.

Press **⬆** up to accept **Products**.

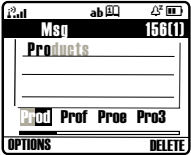

Press **DELETE** to delete last letter entered.

Press **⊗** to enter **Prod** & a space.

Press **⬆** right to highlight another combination.

If you want a different word (such as **Progress**), continue pressing keypad keys to enter the remaining characters.

To enter numbers quickly, press and hold a number key to temporarily switch to **Numeric** mode. Press the number keys to enter the numbers you want. Press **#** to change back to **iTAP** mode.

Press **1** to enter punctuation or other characters.

- 1 Press keypad keys to show possible letter combinations at the bottom of the display.
- 2 Press **⬆** left or right highlight the combination you want.
- 3 Press **⊗** to enter the highlighted combination when a word appears in the display. A space is automatically inserted after the word.

If you enter a word that your phone does not recognize, the phone stores it to use as one of your word options. When you fill the available memory space for unrecognized words, your phone deletes the oldest words to add new words.

## numeric mode

In a text entry screen, press **#** to switch entry modes until the **12** (numeric) indicator displays.

Press keypad keys to enter the numbers you want. When you finish entering numbers, press **#** to switch to another entry method.

## symbol mode

In a text entry screen, press **#** to switch the text entry modes until the **@** (symbol) indicator displays.

Press keypad keys repeatedly to cycle through its symbols.

If you do not press a key for 2 seconds, the highlighted symbol is accepted, and the cursor moves to the next position.

When you finish entering symbols, press **#** to switch to another entry mode.



## symbol chart

 
Use this chart as a guide for entering characters with the **Symbol** mode.


<b>1</b>	. ? ! , @ ' - _ : ; ( ) & " ~ 1 0 ç ÿ % £ \$ ¥ ¤ α € + x * / \ [ ] = > < # §
<b>2</b>	@ _ \ α β
<b>3</b>	/ : ; ð Δ ε φ Φ
<b>4</b>	" & ' √ Γ η ι
<b>5</b>	() [] {} κ λ Λ
<b>6</b>	ç ÿ ~ μ ν ω Ω
<b>7</b>	< > = π Π ρ ρ Σ
<b>8</b>	\$ £ ¥ ¤ α € θ Θ τ υ
<b>9</b>	# % * ζ ξ Ξ X ψ Ψ
<b>0</b>	+ - X * / \ [ ] = > < # §
<b>*</b>	enter a space (hold to enter a return)
<b>#</b>	change text entry method (hold for default)

**Note:** This chart may not reflect the exact character set available on your phone.

## navigation key

Press the *navigation key*  to scroll up, down, left, or right to highlight menu items, to change feature settings, and to play games. Press the left soft key or  to select a highlighted menu item.







**Note:**  usually performs the same function as the left soft key.

## codes & passwords

Your phone's 4-digit **unlock code** is originally set to **1234**. If your service provider didn't change the code, you should change it:

**Find it:**  > Settings > Security > New Passwords

**If you forget your unlock code:** At the **Enter Unlock Code** prompt, try entering  or the last four digits of your phone number.

**If you forget other codes:** If you forget your security code, SIM PIN code, PIN2 code, or call barring password, contact your service provider.

## lock & unlock your phone

You can lock your phone to keep others from using it. To lock or unlock your phone, you need the 4-digit unlock code.

To **manually lock** your phone:

**Find it:**  > Settings > Security > Phone Lock > Lock Now

To **automatically lock** your phone whenever you turn it off:

**Find it:**  > Settings > Security > Phone Lock  
> Automatic Lock > On

**Note:** You can make emergency calls on a locked phone (. A locked phone still rings or vibrates for incoming calls or messages, **but you need to unlock it to answer.**

## unlock your phone

Your service provider may reset the unlock code to the last 4 digits of your phone number.

At the **Enter Unlock Code** prompt:

- 1 Press keypad keys to enter your unlock code.
- 2 Press **OK** to unlock your phone.

 
# customize

---

## ring style


Your phone rings or vibrates to notify you of incoming calls and other events.

You can select one of the five ring style profiles:

 = Loud

 = Vibe & Ring

  = Soft

 = Silent

 = Vibrating


The current ring style indicator will be shown at the top of your phone display.

To set a ring style:

**Find it:**  > Settings > Ring Styles > Style

1 Press  to scroll to the ring style.


2 Press **SELECT** to select the ring style.

Each ring style consists of the following style detail settings: **Ring Volume**, **Ring Tone**, **Incoming Call Alert**, **Message Alert Tone**, **Key Tone Volume**, **Key Tone Type**, **Reminders**, **Startup Music**, and **Power Off Music**. To change these settings, press  > **Settings** > **Ring Styles** > *style Detail*.

**Note:** You can't set an alert for the **Silent** or **Vibrating** style profiles.


## time & date

You must set the time and date to use the datebook.

**Find it:**  > Settings > Initial Setup > Time and Date

# wallpaper

You can set a preloaded or downloaded photo or picture as a wallpaper (background) image on your phone's home screen. The wallpaper image appears as a faint watermark in text and menu displays.

**Find it:**  > Settings > Personalize > Wallpaper



options	
<b>Picture</b>	Select an image for your wallpaper, or <b>Off</b> for no wallpaper.
<b>Layout</b>	Select <b>Center</b> to center the image in the display, <b>Tile</b> to repeat the image across the display, or <b>Fit-to-screen</b> to stretch the image across the display.

# display appearance

This section explains how to adjust the display contrast, color, and backlight.

# contrast


**Find it:**  > Settings > Initial Setup > Contrast

Press  to increase the contrast. Press  left to decrease the contrast.

# color

Select the color style that sets the look and feel of your phone.


**Find it:**  > Settings > Personalize > Color Style

- 1 Press  to scroll to a **Color Style**.
- 2 Press **OK** to select the **Color Style**.
- 3 Press **BACK** to return to previous menu.

# backlight

You can set the amount of time your phone's display and keypad backlight remain lit.

**Find it:**  > Settings > Initial Setup > Backlight

- 1 Press  up or down to scroll to a time-out setting.
- 2 Press **OK** to select the setting.
- 3 Press **BACK** to return to previous menu.

**Note:** To save battery life, choose a shorter backlight display time.


The display and keypad backlight will be lit when you press any key.

## answer options

As an alternative to opening the flip to answer an incoming call, you can use **Anykey Answer**.

To activate or deactivate this option:

**Find it:**  > **Settings** > **In-Call Setup**

- 1 Press  to scroll to **Anykey Answer**.
- 2 Press **ON** to select the option.



# calls

---

For basic instructions on how to make and answer calls, see page 13.

## turn off a call alert



While the phone is ringing or vibrating:


Press **IGNORE** to cancel the incoming call.

Alternatively, you can press the side volume key up or down to turn off the call alert (if the answer call option is not set to **Anykey Answer**).




Depending on your phone settings and/or service subscription, the call may be forwarded to your voice mail, another number, or the caller may hear a busy signal.

## recent calls

Your phone keeps lists of the calls you recently received and dialed, even for calls that did not connect or are missed. The most recent calls are listed first. The oldest calls are deleted as new calls are added.




**Tip:** Press  from the home screen to view the list of dialed calls.

**Find it:**  > **Recent Calls**

- 1 Press  to scroll to **Received Calls** or **Dialed Calls**.
- 2 Press **SELECT** to select the list.
- 3 Press  to scroll to an entry. A ✓ represents calls that are connected.
- 4 To call the number, press .

- 5 To see the call details, press **OPTIONS** > **VIEW**.



## redial

- 1 Press  to view the dialed calls list.
- 2 Press  to scroll to the entry you want to call.
- 3 Press  to redial the number.

## return a call

Your phone keeps a record of your unanswered calls and displays:


**X Missed Calls**, where X is the number of missed calls

- 1 Press **DETAIL** to see the list of received calls.
- 2 Press  to select a call to return.
- 3 Press  to make the call.

## notepad

The most recent set of digits entered on the keypad are stored in your phone's notepad memory. These digits can be a phone number that you called, or a number that you entered but did not call. To retrieve the number stored in the notepad:

**Find it:**  > **Recent Calls** > **Notepad**

Press  to call the number.

or

Press **SAVE** to create a phonebook entry with the number in the **No.** field.

## hold a call

Press **HOLD** (if available) to put the call on hold.



or

Press  > **Hold**.


# call waiting



When you are on a call and a second call comes in, an alert tone sounds to indicate that you have a call waiting.

- 1 Press  to answer the new call.
- 2 Press **SWITCH** to switch between calls.  
or  
Press **LINK** to connect the 2 calls.  
or  
Press  > **End Calls** to end all calls, currently connected call, or the call on hold.

You must turn on call waiting to use this feature. To turn call waiting on or off:

Press  > **Settings** > **In-Call Setup** > **Call Waiting**

# caller ID

## incoming calls



*Calling Line Identification* (Caller ID) displays the phone number of the incoming calls in your phone's display.

The phone displays the caller's name when the name is stored in your phonebook, or the incoming caller's phone number when Caller ID information is not available.

## outgoing calls




You can show or hide your phone number from the called party for the calls you make.

**Find it:**  > **Settings** > **In-Call Setup**  
> **Show Number**


## emergency calls

Your service provider programs one or more emergency phone numbers, such as 911 or 112, that you can call under any circumstances, even when your phone is locked or the SIM card is not inserted.

**Note:** Check with your service provider, as emergency numbers vary by country. Your phone may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues. Do not solely rely on your wireless phone for essential communications, such as medical emergencies.

- 1 Press keypad keys to dial the emergency number.
- 2 Press  to call the emergency number.

## international calls

If your phone service includes international dialing, press and hold  to insert your local international access code (indicate by +). Then, press the keypad keys to dial the country code and phone number.

## 1-touch dial

To call phonebook entries 1 through 9, press and hold the single-digit speed dial number for one second. If no speed dial number is assigned to the digit, you will be prompted to assign a number.

## voicemail



 
Voicemail messages that you receive are stored on the network, not on your phone. To listen to your messages, you must call your voicemail phone number.

Your service provider may include additional information about using this feature.


## listen to voicemail messages

**Find it:**  > Messages > Voicemail

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

**Tip:** Press and hold  to automatically access your voicemail.

## receive voicemail

When you receive a voicemail message, your phone displays the  indicator and **New Voicemail**.

Press **CALL** to listen to the message.

The phone calls your voicemail phone number. If no voicemail number is stored, your phone prompts you to store a number.

## store your voicemail number

If necessary, use the following procedure to store your voicemail phone number on your phone. Usually your service provider has already done this for you.





**Find it:**  > Messages > **OPTIONS** > Voicemail Setup



- 1 Press keypad keys to enter your voicemail number.
- 2 Press **SAVE** to store the number.






You cannot store a **p** (pause) character in this number. If you want to store a voicemail number with these characters, create a phonebook entry for it. Then you can use the entry to call your voicemail.





# other features

## advanced calling




feature	description
<b>conference call</b>	During a call:  > <b>Hold</b> , dial next number, press  , press <b>LINK</b>
<b>call forwarding</b>	Set up or cancel call forwarding:  > <b>Settings</b> > <b>Call Forward</b>
<b>call barring</b>	Restrict outgoing or incoming calls:  > <b>Settings</b> > <b>Security</b> > <b>Call Barring</b>



feature	description
<b>fixed dial</b>	When you turn on fixed dialing, you can call only numbers stored in the fixed dial list.  Turn fixed dialing on or off:  > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b>  Use the fixed dial list:  > <b>Settings</b> > <b>Security</b> > <b>Fixed Dial</b> > <b>Number List</b>

feature	description
<b>transfer a call</b>	<p>During a call press  &gt; <b>New Call</b>, dial the number and press  .</p> <p>When connected, press  &gt; <b>Transfer</b>.</p>
<b>auto redial</b>	<p>When you receive a busy signal, your phone displays <b>Number Busy</b>. Set up your phone to automatically redial the number: </p> <p> &gt; <b>Settings</b> &gt; <b>In-Call Setup</b> &gt; <b>Auto Redial</b></p> <p>When the call goes through, your phone rings or vibrates once, and connects.</p>




feature	description
<b>speed dial</b>	<p>Speed dial a phonebook entry:</p> <p>Enter the speed dial number, press , then press  to call.</p> <p>See an entry's speed dial number:</p> <p> &gt; <b>Phonebook</b>, scroll to the entry, press .</p>

# phonebook







feature	description
<b>create entry</b>	<p>Create a new phonebook entry:</p> <p> &gt; Phonebook &gt; <b>OPTIONS</b> &gt; <b>New</b></p> <p><b>Shortcut:</b> Key in number using Keypad keys, then press <b>SAVE</b> &gt; <b>SIM/Phone Memory</b>.</p>
<b>dial number</b>	<p>Call a number stored in the phonebook:</p> <p> &gt; Phonebook, highlight the phonebook entry, press  to call.</p>



feature	description
<b>set category for entry</b>	<p>Set the category for a phonebook entry:</p> <p> &gt; Phonebook &gt; desired entry &gt; <b>OPTIONS</b> &gt; <b>Change Group</b></p> <p><b>Note:</b> The <b>Category</b> option is not available for entries stored on the SIM card.</p> <p><b>Hint:</b> You can rename your category:</p> <p> &gt; Phonebook &gt; <b>OPTIONS</b> &gt; <b>Categories</b> &gt; desired category &gt; <b>OPTIONS</b> &gt; <b>Rename</b></p>











feature	description
<b>set category view</b>	Set a phonebook category view:  > Phonebook > OPTIONS > Categories > desired category > 
<b>sort phonebook list</b>	Set the order in which phonebook entries are listed:  > Phonebook > OPTIONS > Setting > Sort by > <i>sort order</i>

## messages




feature	description
<b>send text message</b>	Send a text message:   > Messages > Create Message > New Short Msg
<b>send multimedia message</b>	Send a multimedia message:   > Messages > Create Message > New Multimedia Msg
<b>use MMS template</b>	Open an MMS template with preloaded media:   > Messages > Create Message > MMS Templates




feature	description	
<b>read message</b>	Read a new text or multimedia message that you have received:	
	Press <b>DETAIL</b> .	
<b>store message objects</b>	Go to a multimedia message page or highlight an object in a message, then:	
	<b>OPTIONS</b> > <b>Save Object</b>	





## chat


feature	description	
<b>start chat</b>	Start a new chat session:	
	 > <b>Tools</b> > <b>Chat</b>	
	Edit Nickname, press  .	
	Enter new number or press <b>PH.BOOK</b> > <i>desired entry</i> > <b>OK</b>	
	Then press  > compose a chat > 	
<b>receive chat request</b>	When you receive a chat request:	
	Press <b>ACCEPT</b> or <b>IGNORE</b> .	
<b>end chat</b>	During a chat session:	
	 > <b>End Chat</b>	


# personalizing

feature	description
<b>language</b>	Set the menu language:  > Settings > Initial Setup > Language
<b>change home screen keys and icons</b>	Change the soft key labels and menu feature icons on the home screen:  > Settings > Personalize > Home Screen > Home Keys
<b>enable time and date display</b>	Turn the date and time display on and off:  > Settings > Personalize > Home Screen > Clock





feature	description
<b>change home screen layout</b>	Change the layout of the home screen:  > Settings > Personalize > Home Screen > Layout
<b>color style</b>	Change the color scheme of the display:  > Settings > Personalize > Color Style
<b>quick dial</b>	Assign quick dial keys to phone numbers:  > Settings > Personalize > Quick Dial





feature	description
<b>shortcuts</b>	<p>Create a shortcut to a menu item:</p> <p> &gt; <b>Tools</b> &gt; <b>Shortcuts</b> &gt; <b>[Edit Shortcut]</b></p> <p>Highlight the menu item, then press <b>SELECT</b> and assign a number.</p> <p>Select a shortcut:</p> <p> &gt; <b>Tools</b> &gt; <b>Shortcuts</b> &gt; <i>shortcut name</i></p>
<b>store your name and number</b>	<p>Store or edit your name and phone number information on your SIM card: </p> <p> &gt; <b>Settings</b> &gt; <b>Phone Status</b> &gt; <b>My Tel. Numbers</b></p> <p>If you do not know your phone number, contact your service provider.</p>



feature	description
<b>master reset</b>	<p>Reset the phone to the default settings, except unlock code, security code, and lifetime timer:</p> <p> &gt; <b>Settings</b> &gt; <b>Initial Setup</b> &gt; <b>Master Reset</b></p>

feature	description
<b>master clear</b>	<p>Erase all downloaded files and clear all settings and entries except SIM card information, unlock code, and security code.</p> <p> &gt; Settings &gt; Initial Setup &gt; Master Clear</p> <p><b>Caution:</b> Master clear <b>erases all information you have entered</b> (including phonebook and datebook entries) and <b>content you have downloaded</b> (including photos and sounds) stored in your phone's memory. After you erase the information, you can't recover it.</p>




## phone alerts

feature	description
<b>ring style</b>	<p>Change the ring alert:</p> <p> &gt; Settings &gt; Ring Styles &gt; Style</p>
<b>ring volume</b>	<p>Set the ringer volume:</p> <p> &gt; Settings &gt; Ring Styles &gt; Style Detail &gt; Ringing Volume</p>
<b>ringing tone</b>	<p>Set ring tone melody:</p> <p> &gt; Settings &gt; Ring Styles &gt; Style Detail &gt; Ringing Tone</p>
<b>create ring tones</b>	<p>Create ring tones that you can use on your phone:</p> <p> &gt; Multimedia &gt; Sounds &gt; [New iMelody]</p>


feature	description
<b>incoming call alert</b>	Set the alert style for incoming calls:  > Settings > Ring Styles > Style Detail > Incoming Call Alert
<b>message alert tone</b>	Set message alert:  > Settings > Ring Styles > Style Detail > Message Alert Tone
<b>key tone volume</b>	Set keypad key press volume:  > Settings > Ring Styles > Style Detail > Key Tone Volume
<b>key tone type</b>	Set keypad tone:  > Settings > Ring Styles > Style Detail > Key Tone Type

feature	description
<b>reminders</b>	Turn reminders on and off:  > Settings > Ring Styles > Style Detail > Reminders
<b>startup music</b>	Turn the startup music on and off:  > Settings > Ring Styles > Style Detail > Startup Music





## miscellaneous

feature	description
<b>auto power off</b>	Enable the power saving feature:  > Settings > Auto Power Off
<b>change active line</b>	Change the active phone line to make and receive calls from your other phone number:  > Settings > Phone Status > Active Line  <b>Note:</b> This feature is available only for SIM cards enabled for dual phone lines. 

## call times and costs



*Network Connection Time* is the elapsed time from the moment you connect to your service provider's network to the moment you end the call by pressing . This time includes busy signals and ringing.

The amount of network connection time that you track on your resettable timer may not equal the amount of time for which you are billed by your service provider. For billing information, contact your service provider.



feature	description
<b>call times</b>	View call timers:  > Recent Calls > Call Time 
<b>call cost</b>	View call cost information:  > Recent Calls > Call Cost 

# handsfree



**Note:** The use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

feature	description
<b>auto answer</b> (car kit or headset)	Automatically answer calls when connected to a car kit or headset:   > Settings > Headset & Car Setting > Auto Answer





# network



feature	description
<b>network settings</b>	View network information and adjust network settings:  > Settings > Network 



# personal organizer

feature	description
<b>create datebook event</b>	Create a new datebook event:  > Tools > Calendar Highlight the day and press  to choose the date. Select <b>[Add New]</b> .





feature	description
<b>view or edit datebook event</b>	<p>View or edit event details:</p> <p> &gt; Tools &gt; Calendar</p> <p>Highlight the day and press  to choose the date. Press <b>SELECT</b> to view or edit the event.</p>
<b>set alarm</b>	<p>Set an alarm:</p> <p> &gt; Alarm Clock &gt; [New Alarm]</p> <p>Use the keypad keys to enter info for <b>Set alarm name</b> and <b>Set alarm time</b>. Select <b>SAVE</b>.</p> <p>Press  to turn the alarm <b>ON</b>.</p> <p><b>Note:</b> You can program the <b>Alarm</b> to go off <b>Once</b>, <b>Daily</b>, or <b>Workday</b>. You can also enable the <b>Vibrator</b> mode or change the <b>Alarm tone</b>.</p>

feature	description
<b>turn off alarm</b>	<p>Turn off the alarm:</p> <p>Press <b>STOP</b> or .</p> <p>Set 5-minute delay:</p> <p>Press <b>SNOOZE</b>.</p>
<b>calculator</b>	<p>Calculate numbers:</p> <p> &gt; Tools &gt; Calculator</p>

feature	description
<b>currency converter</b>	<p>Convert currency:</p> <p> &gt; Tools &gt; Calculator</p> <p>Press <b>OPTIONS</b>.</p> <p>Scroll to <b>Exchange Rate</b>, press <b>SELECT</b> and choose <b>Foreign Unit Expression</b> or <b>Domestic Unit Expression</b>. Then enter the exchange rate.</p> <p>Enter an amount in the main calculator window, press .</p> <p>Choose either <b>In Foreign</b> or <b>In Domestic</b> to see the exchange value.</p>


## security

feature	description
<b>SIM PIN</b>	<p>Lock or unlock the SIM card:</p> <p> &gt; Settings &gt; Security &gt; SIM PIN</p> <p><b>Caution:</b> If you enter an incorrect PIN code 3 times in a row, your SIM card is disabled and your phone displays <b>SIM Blocked</b>.</p>
<b>lock application</b>	<p>Lock phone applications:</p> <p> &gt; Settings &gt; Security &gt; Phone Lock</p>







# fun & games


feature	description
<b>launch micro-browser</b>	Start a micro-browser session:  > <b>WebAccess</b> > <b>Browser</b>



feature	description
<b>download objects from web page</b>	Download a picture, sound, or MMS template from a Web page:  > <b>WebAccess</b> > <b>Browser</b> , then go to the page that links to the media file.  Highlight the file and press <b>SELECT</b> . Then press <b>STORE</b> .  <b>Note:</b> Normal airtime and/or carrier usage charges apply. If you are unable to connect to the Web session, contact your service provider to verify the browser settings.



feature	description	
<b>web sessions</b>	Select or create a Web session:	
	 > <b>WebAccess</b> > <b>Web Sessions</b>	
<b>launch game</b>	Launch game:	
	 > <b>Games</b>	
	Highlight the game and press <b>SELECT</b> . Instructions are included for each game.	
<b>manage pictures</b>	Manage pictures and animations that you have downloaded:	
	 > <b>Multimedia</b> > <b>Pictures</b>	

feature	description	
<b>manage sounds</b>	Manage ring tones and sounds that you have composed or downloaded:	
	 > <b>Multimedia</b> > <b>Sounds</b>	

# service & repairs

---

If you have questions or need assistance, we're here to help.

Go to [www.motorola.com/consumer/support](http://www.motorola.com/consumer/support), where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at 1-866-395-3710 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).

# Specific Absorption Rate Data

---

## **This model wireless phone meets the government's requirements for exposure to radio waves.**

Your wireless phone is a radio transmitter and receiver. It is designed and manufactured not to exceed limits for exposure to radio frequency (RF) energy set by the Federal Communications Commission (FCC) of the U.S. Government and by the Canadian regulatory authorities. These limits are part of comprehensive guidelines and establish permitted levels of RF energy for the general population. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons, regardless of age or health.

The exposure standard for wireless mobile phones employs a unit of measurement known as the Specific Absorption Rate, or SAR. The SAR limit set by the FCC and by the Canadian regulatory authorities is 1.6 W/kg.<sup>1</sup> Tests for SAR are conducted using standard operating positions accepted by the FCC and by Industry Canada with the phone transmitting at its highest certified power level in all tested frequency bands. Although the SAR is determined at the highest certified power level, the actual SAR

level of the phone while operating can be well below the maximum value. This is because the phone is designed to operate at multiple power levels so as to use only the power required to reach the network. In general, the closer you are to a wireless base station, the lower the power output.

Before a phone model is available for sale to the public in the U.S. and Canada, it must be tested and certified to the FCC and Industry Canada that it does not exceed the limit established by each government for safe exposure. The tests are performed in positions and locations (e.g., at the ear and worn on the body) reported to the FCC and available for review by Industry Canada. The highest SAR value for this model phone when tested for use at the ear is 1.44 W/kg, and when worn on the body, as described in this user guide, is 0.79 W/kg. (Body-worn measurements differ among phone models, depending upon available accessories and regulatory requirements).<sup>2</sup>

While there may be differences between the SAR levels of various phones and at various positions, they all meet the governmental requirements for safe exposure. Please note that improvements to this product model could cause differences in the SAR value for later products; in all cases, products are designed to be within the guidelines.

Additional information on Specific Absorption Rates (SAR) can be found on the Cellular Telecommunications & Internet Association (CTIA) Web site:

<http://www.phonefacts.net>

or the Canadian Wireless Telecommunications Association (CWTA) Web site:

<http://www.cwta.ca>

1. In the United States and Canada, the SAR limit for mobile phones used by the public is 1.6 watts/kg (W/kg) averaged over one gram of tissue. The standard incorporates a substantial margin of safety to give additional protection for the public and to account for any variations in measurements.
2. The SAR information includes the Motorola testing protocol, assessment procedure, and measurement uncertainty range for this product.

# European Union Directives Conformance Statement

---

Hereby, Motorola declares that this product is in compliance with:

 


- The essential requirements and other relevant provisions of Directive 1999/5/EC
- All other relevant EU Directives

You can view your product's Declaration of Conformity (DoC) to Directive 1999/5/EC (to R&TTE Directive) at

[www.motorola.com/rtte](http://www.motorola.com/rtte)

. To find your DoC, enter the Product Approval Number from your product's label in the "Search" bar on the Web site.

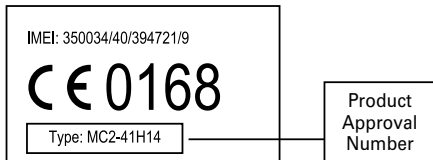

The above gives an example of a typical Product Approval Number.





***MOTOROLA***

## Important Safety and Legal Information

# Safety and General Information

---

**This section contains important information on the safe and efficient operation of your mobile device. Read this information before using your mobile device.**

## Exposure to Radio Frequency (RF) Energy

Your mobile device contains a transmitter and receiver. When it is ON, it receives and transmits RF energy. When you communicate with your mobile device, the system handling your call controls the power level at which your mobile device transmits.

Your Motorola mobile device is designed to comply with local regulatory requirements in your country concerning exposure of human beings to RF energy.

## Operational Precautions

For optimal mobile device performance, and to be sure that human exposure to RF energy does not exceed the guidelines set forth in the relevant standards, always follow these instructions and precautions.

## Product Operation

When placing or receiving a phone call, hold your mobile device just like you would a landline phone.

If you wear the mobile device on your body, always place the mobile device in a Motorola-supplied or approved clip, holder, holster, case, or body harness. If you do not use a body-worn accessory supplied or approved by Motorola, keep the mobile device and its antenna at least 2.5 centimeters (1 inch) from your body when transmitting.

Using accessories not supplied or approved by Motorola may cause your mobile device to exceed RF energy exposure guidelines. For a list of Motorola-supplied or approved accessories, visit our Web site at: [www.motorola.com](http://www.motorola.com).

## RF Energy Interference/Compatibility

Nearly every electronic device is subject to RF energy interference from external sources if inadequately shielded, designed, or otherwise configured for RF energy compatibility. In some circumstances your mobile device may cause interference with other devices.

## Follow Instructions to Avoid Interference Problems

Turn off your mobile device in any location where posted notices instruct you to do so.

In an aircraft, turn off your mobile device whenever instructed to do so by airline staff. If your mobile device offers an airplane mode or similar feature, consult airline staff about using it in flight.

## Implantable Medical Devices

If you have an implantable medical device, such as a pacemaker or defibrillator, consult your physician before using this mobile device.

Persons with implantable medical devices should observe the following precautions:

- ALWAYS keep the mobile device more than 20 centimeters (8 inches) from the implantable medical device when the mobile device is turned ON.
- DO NOT carry the mobile device in the breast pocket.
- Use the ear opposite the implantable medical device to minimize the potential for interference.
- Turn OFF the mobile device immediately if you have any reason to suspect that interference is taking place.

Read and follow the directions from the manufacturer of your implantable medical device. If you have any questions about using

your mobile device with your implantable medical device, consult your healthcare provider.

## Driving Precautions

The use of wireless phones while driving may cause distraction. Discontinue a call if you can't concentrate on driving.

Additionally, the use of wireless devices and their accessories may be prohibited or restricted in certain areas. Always obey the laws and regulations on the use of these products.

Responsible driving practices can be found in the "Smart Practices While Driving" section in this guide (or separate guide).

## Operational Warnings

Obey all posted signs when using mobile devices in public areas.







### Potentially Explosive Atmospheres

Areas with potentially explosive atmospheres are often, but not always, posted and can include fueling areas, such as below decks on boats, fuel or chemical transfer or storage facilities, or areas where the air contains chemicals or particles, such as grain dust, or metal powders.

When you are in such an area, turn off your mobile device, and do not remove, install, or charge batteries. In such areas, sparks can occur and cause an explosion or fire.

## Symbol Key

Your battery, charger, or mobile device may contain symbols, defined as follows:

Symbol	Definition
	Important safety information follows.
	Do not dispose of your battery or mobile device in a fire.
	Your battery or mobile device may require recycling in accordance with local laws. Contact your local regulatory authorities for more information.
	Do not throw your battery or mobile device in the trash.
	Do not let your battery, charger, or mobile device get wet.
	Listening at full volume to music or voice through a headset may damage your hearing.

## Batteries & Chargers

**Caution: Improper treatment or use of batteries may present**

**a danger of fire, explosion, leakage, or other hazard. For more information, see the “battery use & safety” section in the user’s guide.**

## Keep Your Mobile Device and Its Accessories Away From Small Children

These products are not toys and may be hazardous to children. For example:

- A choking hazard may exist for small, detachable parts.
- Improper use could result in loud sounds, possibly causing hearing injury.
- Improperly handled batteries could overheat and cause a burn.

## Glass Parts

Some parts of your mobile device may be made of glass. This glass could break if the product is dropped on a hard surface or receives a substantial impact. If glass breaks, do not touch or attempt to remove. Stop using your mobile device until the glass is replaced by a qualified service center.

## Seizures/Blackouts

Some people may be susceptible to epileptic seizures or blackouts when exposed to flashing lights, such as when playing video games. These may occur even if a person has never had a previous seizure or blackout.

If you have experienced seizures or blackouts, or if you have a family history of such occurrences, please consult with your physician before playing video games or enabling a flashing-lights feature (if available) on your mobile device.

Discontinue use and consult a physician if any of the following symptoms occur: convulsion, eye or muscle twitching, loss of awareness, involuntary movements, or disorientation. It is always a good idea to hold the screen away from your eyes, leave the lights on in the room, take a 15-minute break every hour, and stop use if you are tired.

## Caution About High Volume Usage



**Warning:** Exposure to loud noise from any source for extended periods of time may affect your hearing. The louder the volume sound level, the less time is required before your hearing could be affected. To

protect your hearing:

- Limit the amount of time you use headsets or headphones at high volume.

- Avoid turning up the volume to block out noisy surroundings.
- Turn the volume down if you can't hear people speaking near you.

If you experience hearing discomfort, including the sensation of pressure or fullness in your ears, ringing in your ears, or muffled speech, you should stop listening to the device through your headset or headphones and have your hearing checked.

For more information about hearing, see our Web site at [www.motorola.com/hearingsafety](http://www.motorola.com/hearingsafety) (in English only).

## Repetitive Motion

When you repetitively perform actions such as pressing keys or entering finger-written characters, you may experience occasional discomfort in your hands, arms, shoulders, neck, or other parts of your body. If you continue to have discomfort during or after such use, stop use and see a physician.

[Mar0108]

# Industry Canada Notice to Users

---

Operation is subject to the following two conditions: (1) This device may not cause interference and (2) This device must accept

any interference, including interference that may cause undesired operation of the device. See RSS-GEN 7.1.5.

## FCC Notice to Users

---

**The following statement applies to all products that have received FCC approval. Applicable products bear the FCC logo, and/or an FCC ID in the format FCC-ID:xxxxxx on the product label.**

Motorola has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user's authority to operate the equipment. See 47 CFR Sec. 15.21.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. See 47 CFR Sec. 15.19(3).

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This

equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

# Motorola Limited Warranty for the United States and Canada

---

## What Does this Warranty Cover?

Subject to the exclusions contained below, Motorola, Inc. warrants its telephones, pagers, messaging devices, and consumer and professional two-way radios (excluding commercial, government or industrial radios) that operate via Family Radio Service or General Mobile Radio Service, Motorola-branded or certified accessories sold for use with these Products ("Accessories") and Motorola software contained on CD-ROMs or other tangible media and sold for use with these Products ("Software") to be free from defects in materials and workmanship under normal consumer usage for the period(s) outlined below. This limited warranty is a consumer's exclusive remedy, and applies as follows to new Motorola Products, Accessories and Software purchased by consumers in the United States or Canada, which are accompanied by this written warranty:

## Products and Accessories

<b>Products Covered</b>	<b>Length of Coverage</b>
<b>Products and Accessories</b> as defined above, unless otherwise provided for below.	<b>One (1) year</b> from the date of purchase by the first consumer purchaser of the product unless otherwise provided for below.
<b>Decorative Accessories and Cases.</b> Decorative covers, bezels, PhoneWrap™ covers and cases.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.
<b>Monaural Headsets.</b> Ear buds and boom headsets that transmit mono sound through a wired connection.	<b>Limited lifetime warranty</b> for the lifetime of ownership by the first consumer purchaser of the product.

Products Covered	Length of Coverage
<b>Consumer and Professional Two-Way Radio Accessories.</b>	<b>Ninety (90) days</b> from the date of purchase by the first consumer purchaser of the product.
<b>Products and Accessories that are Repaired or Replaced.</b>	<b>The balance of the original warranty or for ninety (90) days</b> from the date returned to the consumer, whichever is longer.

#### Exclusions

**Normal Wear and Tear.** Periodic maintenance, repair and replacement of parts due to normal wear and tear are excluded from coverage.

**Batteries.** Only batteries whose fully charged capacity falls below 80% of their rated capacity and batteries that leak are covered by this limited warranty.

**Abuse & Misuse.** Defects or damage that result from: (a) improper operation, storage, misuse or abuse, accident or neglect, such as physical damage (cracks, scratches, etc.) to the surface of the product resulting from misuse; (b) contact with liquid, water, rain, extreme humidity or heavy perspiration, sand, dirt or the like, extreme heat, or food; (c) use of the Products or Accessories for commercial purposes or subjecting the Product or Accessory to abnormal usage or conditions; or (d) other acts which are not the fault of Motorola, are excluded from coverage.

**Use of Non-Motorola Products and Accessories.** Defects or damage that result from the use of non-Motorola branded or certified Products, Accessories, Software or other peripheral equipment are excluded from coverage.

**Unauthorized Service or Modification.** Defects or damages resulting from service, testing, adjustment, installation, maintenance, alteration, or modification in any way by someone other than Motorola, or its authorized service centers, are excluded from coverage.

**Altered Products.** Products or Accessories with (a) serial numbers or date tags that have been removed, altered or obliterated; (b) broken seals or that show evidence of tampering; (c) mismatched board serial numbers; or (d) nonconforming or non-Motorola housings, or parts, are excluded from coverage.

**Communication Services.** Defects, damages, or the failure of Products, Accessories or Software due to any communication service or signal you may subscribe to or use with the Products Accessories or Software is excluded from coverage.

#### Software

Products Covered	Length of Coverage
<b>Software.</b> Applies only to physical defects in the media that embodies the copy of the software (e.g. CD-ROM, or floppy disk).	<b>Ninety (90) days</b> from the date of purchase.



## Exclusions

**Software Embodied in Physical Media.** No warranty is made that the software will meet your requirements or will work in combination with any hardware or software applications provided by third parties, that the operation of the software products will be uninterrupted or error free, or that all defects in the software products will be corrected.

**Software NOT Embodied in Physical Media.** Software that is not embodied in physical media (e.g. software that is downloaded from the internet), is provided “as is” and without warranty.

## Who Is Covered?

This warranty extends only to the first consumer purchaser, and is not transferable.

## What Will Motorola Do?

Motorola, at its option, will at no charge repair, replace or refund the purchase price of any Products, Accessories or Software that does not conform to this warranty. We may use functionally equivalent reconditioned/refurbished/pre-owned or new Products, Accessories or parts. No data, software or applications added to your Product, Accessory or Software, including but not limited to personal contacts, games and ringer tones, will be reinstalled. To avoid losing such data, software and applications please create a back up prior to requesting service.

## How to Obtain Warranty Service or Other Information

<b>USA</b>	<b>Phones:</b> 1-800-331-6456 <b>Pagers:</b> 1-800-548-9954 <b>Two-Way Radios and Messaging Devices:</b> 1-800-353-2729
<b>Canada</b>	<b>All Products:</b> 1-800-461-4575
<b>TTY</b>	1-888-390-6456
For <b>Accessories</b> and <b>Software</b> , please call the telephone number designated above for the product with which they are used.	

You will receive instructions on how to ship the Products, Accessories or Software, at your expense, to a Motorola Authorized Repair Center. To obtain service, you must include: (a) a copy of your receipt, bill of sale or other comparable proof of purchase; (b) a written description of the problem; (c) the name of your service provider, if applicable; (d) the name and location of the installation facility (if applicable) and, most importantly; (e) your address and telephone number.

## What Other Limitations Are There?

ANY IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY, OTHERWISE THE REPAIR, REPLACEMENT, OR REFUND AS PROVIDED UNDER THIS EXPRESS LIMITED WARRANTY IS THE EXCLUSIVE REMEDY OF THE CONSUMER, AND IS PROVIDED IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED. IN NO EVENT SHALL MOTOROLA BE LIABLE, WHETHER IN CONTRACT OR TORT (INCLUDING NEGLIGENCE) FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT, ACCESSORY OR SOFTWARE, OR FOR ANY INDIRECT, INCIDENTAL, SPECIAL OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR LOSS OF REVENUE OR PROFITS, LOSS OF BUSINESS, LOSS OF INFORMATION OR DATA, SOFTWARE OR APPLICATIONS OR OTHER FINANCIAL LOSS ARISING OUT OF OR IN CONNECTION WITH THE ABILITY OR INABILITY TO USE THE PRODUCTS, ACCESSORIES OR SOFTWARE TO THE FULL EXTENT THESE DAMAGES MAY BE DISCLAIMED BY LAW.

**Some states and jurisdictions do not allow the limitation or exclusion of incidental or consequential damages, or limitation on the length of an implied warranty, so the above limitations or exclusions may not apply to you. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state or from one jurisdiction to another.**

Laws in the United States and other countries preserve for Motorola certain exclusive rights for copyrighted Motorola software such as the exclusive rights to reproduce and distribute copies of the Motorola software. Motorola software may only be copied into, used in, and redistributed with, the Products associated with such Motorola software. No other use, including without limitation disassembly of such Motorola software or exercise of the exclusive rights reserved for Motorola, is permitted.

# Hearing Aid Compatibility with Mobile Phones

---

Some Motorola phones are measured for compatibility with hearing aids. If the box for your particular model has “Rated for Hearing Aids” printed on it, the following explanation applies.

When some mobile phones are used near some hearing devices (hearing aids and cochlear implants), users may detect a buzzing, humming, or whining noise. Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference they generate.

The wireless telephone industry has developed ratings for some of their mobile phones, to assist hearing device users in finding phones that may be compatible with their hearing devices. Not all phones have been rated. Phones that are rated have the rating on their box or a label on the box.

The ratings are not guarantees. Results will vary depending on the user’s hearing device and hearing loss. If your hearing device happens to be vulnerable to interference, you may not be able to use a rated phone successfully. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

**M-Ratings:** Phones rated M3 or M4 meet FCC requirements and are likely to generate less interference to hearing devices than phones that are not labeled. M4 is the better/higher of the two ratings.

**T-Ratings:** Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device’s telecoil (“T Switch” or “Telephone Switch”) than unrated phones. T4 is the better/higher of the two ratings. (Note that not all hearing devices have telecoils in them.)

Hearing devices may also be measured for immunity to this type of interference. Your hearing device manufacturer or hearing health professional may help you find results for your hearing device. The more immune your hearing aid is, the less likely you are to experience interference noise from mobile phones.

# Information from the World Health Organization

---

Present scientific information does not indicate the need for any special precautions for the use of mobile phones. If you are concerned, you may want to limit your own or your children's RF

exposure by limiting the length of calls or by using handsfree devices to keep mobile phones away from your head and body.

Source: WHO Fact Sheet 193

Further information: <http://www.who.int/peh-emf>

## Product Registration

---

Online Product Registration:

[www.motorola.com/us/productregistration](http://www.motorola.com/us/productregistration)

Product registration is an important step toward enjoying your new Motorola product. Registering permits us to contact you for product or software updates and allows you to subscribe to updates on new products or special promotions. Registration is not required for warranty coverage.

Please retain your original dated sales receipt for your records. For warranty service of your Motorola Personal Communications Product you will need to provide a copy of your dated sales receipt to confirm warranty status.

Thank you for choosing a Motorola product.

# Export Law Assurances

---

This product is controlled under the export regulations of the United States of America and Canada. The Governments of the United States of America and Canada may restrict the exportation

or re-exportation of this product to certain destinations. For further information contact the U.S. Department of Commerce or the Canadian Department of Foreign Affairs and International Trade.

## Caring for the Environment by Recycling

---



This symbol on a Motorola product means the product should not be disposed of with household waste.

### Disposal of your Mobile Device and Accessories

Please do not dispose of mobile devices or electrical accessories (such as chargers, headsets, or batteries) with your household waste. These items should be disposed of in accordance with the national collection and recycling schemes operated by your local or regional authority. Alternatively, you may return unwanted mobile devices and electrical accessories to any Motorola Approved Service Center in your region. Details of Motorola approved

national recycling schemes, and further information on Motorola recycling activities can be found at: [www.motorola.com/recycling](http://www.motorola.com/recycling)

### Disposal of your Mobile Device Packaging and User's Guide

Product packaging and user's guides should only be disposed of in accordance with national collection and recycling requirements. Please contact your regional authorities for more details.

# California Perchlorate Label

---

Some mobile phones use an internal, permanent backup battery on the printed circuit board that may contain very small amounts of perchlorate. In such cases, California law requires the following label:

“Perchlorate Material – special handling may apply. See [www.dtsc.ca.gov/hazardouswaste/perchlorate](http://www.dtsc.ca.gov/hazardouswaste/perchlorate).”

There is no special handling required by consumers.

## Privacy and Data Security

---

Motorola understands that privacy and data security are important to everyone. Because some features of your mobile device may affect your privacy or data security, please follow these recommendations to enhance protection of your information:

- **Monitor access**—Keep your mobile device with you and do not leave it where others may have unmonitored access. Lock your device’s keypad where this feature is available.
- **Keep software up to date**—If Motorola or a software/application vendor releases a patch or software fix for your mobile device that updates the device’s security, install it as soon as possible.
- **Erase before recycling**—Delete personal information or data from your mobile device prior to disposing of it or turning it in for recycling. For step-by-step instructions on how to delete all personal information from your device, see the section entitled “master clear” or “delete data” in the user’s guide.

**Note:** For information on backing up your mobile device data before erasing it, go to [www.motorola.com](http://www.motorola.com) and then navigate to the “downloads” section of the consumer Web page for “Motorola Backup” or “Motorola Phone Tools.”

- **Understanding AGPS**—To provide location information for emergency calls, certain Motorola mobile devices incorporate *Assisted Global Positioning System* (AGPS) technology. AGPS technology also can be used in non-emergency applications to track and monitor a user’s location—for example, to provide driving directions. Users who prefer not to permit such tracking and monitoring should avoid using such applications.

If you have further questions regarding how the use of your mobile device may impact your privacy or data security, please contact Motorola at [privacy@motorola.com](mailto:privacy@motorola.com), or contact your service provider.

# Smart Practices While Driving

---

## Drive Safe, Call Smart

**Check the laws and regulations on the use of mobile devices and their accessories in the areas where you drive. Always obey them. The use of these devices may be prohibited or restricted in certain areas -- for example, handsfree use only. Go to [www.motorola.com/callsmart](http://www.motorola.com/callsmart) (in English only) for more information.**

Your mobile device lets you communicate by voice and data—almost anywhere, anytime, wherever wireless service is available and safe conditions allow. When driving a car, driving is your first responsibility. If you choose to use your mobile device while driving, remember the following tips:

- **Get to know your Motorola mobile device and its features such as speed dial and redial.** If available, these features help you to place your call without taking your attention off the road.
- **When available, use a handsfree device.** If possible, add an additional layer of convenience to your mobile device with one of the many Motorola Original handsfree accessories available today.
- **Position your mobile device within easy reach.** Be able to access your mobile device without removing your



TM

eyes from the road. If you receive an incoming call at an inconvenient time, if possible, let your voicemail answer it for you.

- **Let the person you are speaking with know you are driving; if necessary, suspend the call in heavy traffic or hazardous weather conditions.** Rain, sleet, snow, ice, and even heavy traffic can be hazardous.
- **Do not take notes or look up phone numbers while driving.** Jotting down a “to do” list or going through your address book takes attention away from your primary responsibility—driving safely.
- **Dial sensibly and assess the traffic; if possible, place calls when your car is not moving or before pulling into traffic.** If you must make a call while moving, dial only a few numbers, check the road and your mirrors, then continue.
- **Do not engage in stressful or emotional conversations that may be distracting.** Make people you are talking with aware you are driving and suspend conversations that can divert your attention away from the road.

- **Use your mobile device to call for help.** Dial 911 or other local emergency number in the case of fire, traffic accident, or medical emergencies.\*
- **Use your mobile device to help others in emergencies.** If you see an auto accident, crime in progress, or other serious emergency where lives are in danger, call 911 or other local emergency number, as you would want others to do for you.\*
- **Call roadside assistance or a special non-emergency wireless assistance number when necessary.** If you see a broken-down vehicle posing no serious hazard, a broken traffic signal, a minor traffic accident where no one appears injured, or a vehicle you know to be stolen, call roadside assistance or other special non-emergency wireless number.\*

---

\* Wherever wireless phone service is available.



# index

---

- A**
  - alarm clock 47
  - alert
    - creating 43
    - defined 28
    - setting 28, 43
  - animation
    - downloading 49
    - viewing 50
    - wallpaper 29
  - answering a call 30
  - application, locking and unlocking 48
- B**
  - backlight 29
  - barring calls 36
- battery
  - charging 12
  - extending battery life 29
  - installing 9
- battery life, extend 9
- browser. *See* micro-browser
- C**
  - calculator 47
  - call
    - answer options 30
    - barring 36
    - barring password, changing 26
    - call waiting 33
    - costs 45
    - dialed calls list 31
    - dialing 13
    - emergency number 34
    - forwarding 36
    - hold 32
    - international access code 34
    - making 13
    - received calls list 31
    - ring style 28, 43
    - timers 45
    - unanswered call 32
  - call waiting 33
  - caller ID 33
  - calling line identification. *See* caller ID
  - category
    - phonebook entry 38
    - view 39
  - center select button 26

- character chart 23
- chat 40
- clock
  - setting 28
- codes
  - changing 26
  - default 26
- color, setting 29
- conference call 36
- contrast, setting 29

## D

- date, setting 28
- datebook 46, 47
- diald calls list 31
- dialing a number 13, 36, 37
- display
  - backlight 29
  - color 29
  - contrast 29
  - description 15

- home screen 15
- language 41
- personalizing 41

## E

- emergency number 34
- end key 1
- Enter Unlock Code message 27
- export regulations 67

## F

- 5-way navigation key 26
- fixed dial 36
- forwarding calls 36

## H

- headset jack 1
- hearing aids 65
- hold a call 32
- home keys, personalizing 41
- home screen

- defined 15

## I

- incoming call
  - forwarding 36
- Incoming Call message 33
- indicators
  - message waiting 14
  - text case 21
  - text entry method 21
  - voicemail message 35
- international access code 34
- iTAP software 23

## K

- key
  - center select button 26
  - end 1
  - 5-way navigation 26
  - left soft key 1, 15, 41
  - menu 1

- power 1
- right soft key 1, 15, 41
- send 1
- volume control 1, 13

keypad

- volume, setting 44

## L

- language, setting 41
- left soft key
  - functions 1, 15
  - personalizing 41
- lock
  - application 48
  - phone 26
  - SIM card 48

## M

- making a call 13
- master clear 43
- master reset 42

- menu
  - entering text 19
  - icons, changing in home screen 41
  - language, setting 41
  - using 18

- menu key 1

- message

- chat 40
- MMS template 39
- MMS, defined 14
- multimedia message 39
- reading 40
- text 39, 40

- message waiting indicator 14

- micro-browser

- browser setup 50
- using 49
- Web sessions 50

- MMS template 39

- MMS. *See* message
- multimedia message
  - receiving 14
  - sending 14, 39
- multimedia messaging service.
  - See* message

## N

- network settings 46
- notepad 32
- numbers, entering 25

## O

- 1-touch dial
  - using 34
- optional feature, defined 8

## P

- perchlorate label 68
- phone
  - answer options 30

- clear stored information 43
- codes 26
- date, setting 28
- language, setting 41
- locking 26
- network settings 46
- reset all options 42
- ring style 28, 43
- security code 26
- time, setting 28
- turning on/off 12
- unlock code 26
- unlocking 12, 26
- phone number
  - international access code 34
  - redialing 32
  - storing in phonebook 38
- phonebook
  - category for entry 38
  - category view 39

- dialing a number 38
  - 1-touch dial 34
  - picture ID 33
  - sorting entries 39
  - storing an entry 38
- photo
  - downloading 49
  - picture ID 33
- picture
  - downloading 49
  - viewing 50
  - wallpaper 29
- picture ID 33
- PIN code
  - changing 26
  - entering 48
- PIN2 code, changing 26
- power key 1
- predictive text entry 23
- primary text entry method 20

## R

- received calls list 31
- recent calls 31
- redial
  - busy number 32
- right soft key
  - functions 1, 15
  - personalizing 41
- ring style, setting 28, 43
- ring tone
  - creating 43
  - downloading 49
  - managing 50
- ringer volume, setting 43

## S

- safety information 56
- safety tips 69
- secondary text entry method 20
- security code

- changing 26
- default 26
- send key 1
- service dial 37
- shortcuts 42
- silent alert, setting 28, 43
- SIM Blocked message 12, 48
- SIM card
  - defined 9
  - installing 9
  - locking 48
  - PIN code entry 12
  - PIN code, changing 26
  - PIN2 code, changing 26
  - precautions 9
  - SIM Blocked message 12, 48
- SIM PIN code
  - changing 26
  - entering 48
- SIM PIN2 code, changing 26

- soft keys
  - functions 15
  - illustration 1
  - personalizing 41
- sound
  - creating 43
  - downloading 49
  - managing 50
- speakerphone
  - handsfree 46
- standby time, increasing 29
- symbol chart 25
- symbols, entering 25

## T

- tap method text entry 22
- text
  - capitalization, changing 21
  - character chart 23
  - entering 19
  - entry method, selecting 20

- entry method, setup 21
- iTAP software predictive text
  - entry 23
- numeric method 25
- symbol chart 25
- symbol method 25
- tap method 22
- text case indicator 21
- text entry method
  - selecting 20
  - setup 21
- text entry method indicator 21
- time, setting 28
- timers 45
- travel charger 12

## U

- unlock
  - application 48
  - phone 26
- unlock code

changing 26

default 26

entering 12

## **V**

vibrate alert

setting 28, 43

voicemail 34

voicemail message indicator 35

volume

keypad 44

ringer 43

volume keys 13

## **W**

wallpaper 29

warranty 61

Web pages 49

Web sessions 50

WHO information 66



[www.motorola.com](http://www.motorola.com)

