

WELCOME

Your MOTOGO! makes life fun. All social, all the time.

- **Messaging.** Easy texting and no more cramped thumbs with the built-in keypad.
- **Personalization.** Make your phone your own with wallpapers and more.
- **Photos & Music.** Take and send photos to your friends. Listen to music could be: when you want, wherever you are.

We've crammed all the main features of your phone into this handy guide, and in a matter of minutes we'll show you just how easy your phone is to use. You may be surprised at what you discover.

Note: Your phone may not appear exactly as the images in this guide.

Caution: Before assembling, charging, or using your phone for the first time, please read the important safety, regulatory and legal information provided with your product.

YOUR PHONE

MicroUSB Connector
Charge & connect to computer.

3.5mm Headset Jack
Listen to music or call handsfree.

Note: for some headsets with hang up buttons, the buttons will not work.

Volume Keys

Microphone

IMPORTANT KEYS

MicroUSB Connector
Charge & connect to computer.

3.5mm Headset Jack
Listen to music or call handsfree.

Note: for some headsets with hang up buttons, the buttons will not work.

Volume Keys

Microphone

MESSAGES

Send an SMS or MMS

- 1 Press **Menu** > **Messages** > **Write message**.
- 2 Enter your message using the keypad.

Tip: Press **Options** > **Input method** to switch text entry modes, such as **abc** or **Numeric**. To enter a symbol, press **[SYM]**.

- 3 To add pictures, sounds, or videos, press **Options**.
- 4 Press **Options** > **Send to** to enter one or more recipients or to select a contact from your phonebook.

Read messages

When you receive a message, your phone plays an alert and displays **[icon]** on the screen. Press **View** to open the message.

Tip: You can read all messages in your inbox by pressing **Menu** > **Messages** > **Inbox**.

CALLS

Make calls

Enter a number and press **SEND**.

Answer calls

When your phone rings or vibrates, press **SEND**.

End a call

Press **PWR/END**.

Redial number

- 1 From the home screen, press **SEND** to see a list of **All calls**.
- 2 Scroll to the entry you want and press **SEND**.

EMERGENCY CALLS



To call an emergency number, enter the emergency number and press **SEND**.

Your service provider programs one or more emergency phone

numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

Cool down

In very limited circumstances, such as where your phone has been exposed to extreme heat, you may see "Cool Down" messages. To avoid possible damage to your battery and phone, you should follow these instructions until the phone is within its recommended temperature range. When your phone is in "Cool Down" mode, only emergency calls can be made.

TIPS & TRICKS

Voicemail

Press and hold **1**. If your voicemail number is preset, you will connect.

Handsfree speaker

During an active call, press **[icon]** to turn the handsfree speaker on. To turn the handsfree speaker off, press **[icon]** again. You can also use a wired headset to go handsfree.

Lock your phone

Press **Menu** > **Settings** > **Security Settings** > **Phone Security** > **Phone Lock**, then enter a password to lock your phone. The code is originally set to **1122**.

To change your password, in the Security Settings menu, select **Change Password** > **Phone Password**.

Reset

To reset default factory settings on your phone, press **Menu** > **Settings** > **Restore Factory Settings**, then enter **1122**.

Caution: This option erases all your data and information.

MUSIC

Play music

Press **Menu** > **Multimedia** > **Media player**

Controls

controls	
play/pause	Press [icon] .
next/previous song	Press [icon] right or left.
fast forward/rewind	Press and hold [icon] right or left.
volume	Press the side volume keys up or down.
view videos full screen	Press z .

Tip: You can use other phone features when playing music, but games or radio turns the audio player off. If you receive a call while playing music, the player pauses automatically. Playing music resumes after you end the call.

MENU MAP

Prepaid

Contacts

Games & Apps

Recent Calls

- Call History
- Call Settings

Messages

- Push Mail
- Write Message
- Inbox
- Drafts
- Outbox
- Sent Messages
- Delete Messages
- Templates
- Message Settings

Camera

My Folder

Multimedia

- Image Viewer
- Media Player
- Video Recorder
- Sound Recorder
- FM Radio
- Melody Composer

Tools

- Alarm
- World Clock
- Calendar
- Calculator
- Tasks
- Currency Converter

Settings

- Phone Settings
- Network Settings
- Security Settings
- Connectivity
- Restore Factory Settings
- Sound Effects

User Profiles

Browser

This is a standard menu layout. Your menu may be a little different.

LET'S GO



BASICS

Turn it on & off

Press and hold **PWR/END** for a few seconds to turn the phone on/off.

Menu navigation

Press the left soft key to open the main menu.

Press the navigation key **[icon]** up, down, right or left to highlight a menu option.

Press **[icon]** to select the highlighted option.

PERSONALIZE

Set your wallpaper

Change the wallpaper to one that makes you smile.

Press **Menu** > **Settings** > **Phone settings** > **Display** > **Wallpaper**.

Set ringtone & volume

Play it loud or keep it quiet, you choose.

Press **Menu** > **User Profiles**

Choose a profile. Press **Options** > **Customize** to edit a profile.

Set shortcuts

Set shortcuts to features you use most. Press up, down, left, or right from the home screen to access them.

Press **Menu** > **Settings** > **Phone settings** > **Dedicated key**.

CONTACTS

Save contacts

- 1 Enter the number on the home screen and press **Options** > **Save to Contacts**.
- 2 Enter the contact details and press **Yes** to save.

Tip: Press **Menu** > **[icon]** **Contacts** > **Options** > **Phonebook settings** > **Storage Location** to choose where to save your contacts (**SIM** and/or **Phone memory**).

Call contacts

- 1 Press **Menu** > **[icon]** **Contacts**.
- 2 Press **[icon]** up or down, to scroll through the list to highlight the contact's number.
- 3 Press **SEND**.

PHOTOS & VIDEOS

Take photos & videos

- 1 To use the camera or video recorder, press **Menu** > **Camera** or **Menu** > **Multimedia** > **Video Recorder**.
- 2 Press **[icon]** to take your photo or to start/stop the video.

- To **tune a station**, press **[icon]** right/left. Press **Options** > **Auto Search** to search and store automatically.
- To **find the next station**, press **[icon]** up, then press **[icon]** right/left.
- To **share** photos, press **Options** > **Forward** > **Via Bluetooth**, **As Email**, or **As multimedia message**.
- To **stop the recording** and **save** the video, press **[icon]**.
- To **delete** the photo, press **Options** > **Delete**
- To **return to the viewfinder**, press **[C]**.
- To **view** your stored pictures, press **[icon]** > **Switch to** > **Photo Album**.

To **transfer** photos or videos to/from your memory card, plug your USB cable into your phone & computer, then drag & drop files.

RADIO

Listen to the radio

First, plug in a headset (required). Press **Menu** > **Multimedia** > **FM Radio**. Then to:

- 1 To **tune a station**, press **[icon]** right/left. Press **Options** > **Auto Search** to search and store automatically.
 - 2 Press **[icon]** to take your photo or to start/stop the video.
- To **find the next station**, press **[icon]** up, then press **[icon]** right/left.
 - To **share** photos, press **Options** > **Forward** > **Via Bluetooth**, **As Email**, or **As multimedia message**.
 - To **stop the recording** and **save** the video, press **[icon]**.
 - To **delete** the photo, press **Options** > **Delete**
 - To **return to the viewfinder**, press **[C]**.
 - To **view** your stored pictures, press **[icon]** > **Switch to** > **Photo Album**.

Store favorite stations

When listening to a station, press **Options** > **Channel list**. Select a channel number and press **Add** to store it.

Press **Options** > **Channel list** to see your stored stations. Press keys **1** through **9** to select a stored station.

BLUETOOTH

Connect new devices

- 1 Make sure the device you are pairing with is in discoverable mode.
- 2 Press **Menu** > **Settings** > **Connectivity** > **Bluetooth** > **My Device** > **Search for All Devices**.
- 3 When your phone lists the devices it finds within range, select the device name > **Pair** to connect with it.
- 4 If necessary, press **Yes** and, if prompted, enter the device passkey (such as **0000**) to connect to the device.

To automatically reconnect/disconnect your phone with a paired device, just turn the device on/off.

To send a media file or contact, open the item that you want to transfer, then press **Options** > **Send** > **Via Bluetooth**.

WEB

Surf the web

Note: If you can't connect, contact your service provider. Status indicators appear across the top of the screen:

Select **Browser** from the home screen.

- To go to your home page, press **Homepage**.
- To go to a webpage, press **Input address** and enter the URL using the keypad.
- To bookmark a page, press **Options** > **Add to Bookmarks**.

DISPLAY

The home screen appears when you turn on the phone. Status indicators appear across the top of the screen:



Note: Your home screen may look a little different.

