 


Easy Mode

Samsung Easy Mode is a built-in accessibility feature that simplifies the user interface. It enlarges icons and text, declutters the Home screen and prevents accidental taps by adjusting touch-and-hold delays. It is ideal for seniors, children, or anyone who finds standard smartphone layouts overwhelming.

 
Activating Easy Mode

1

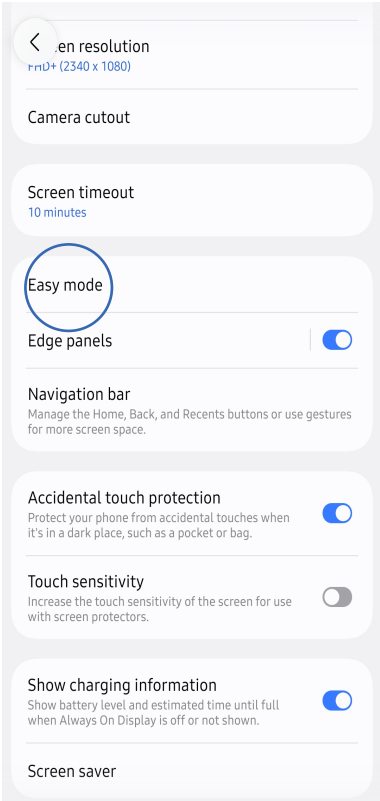


In Settings, search for **Easy Mode**.

2

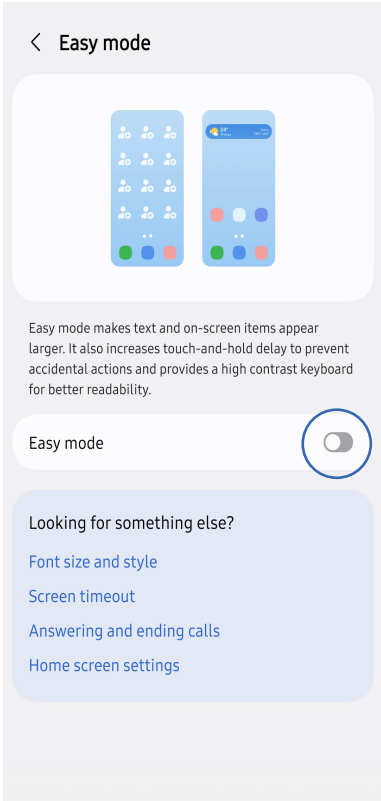

Toggle **Easy Mode** on or off.

 3

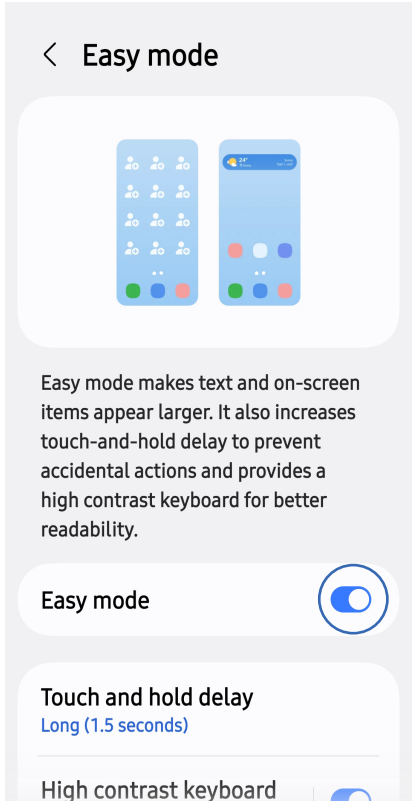

Once Easy Mode has been activated, the screen size and font will increase.

Key features and customizations

Once activated, Easy Mode immediately applies the following changes:

Larger elements: App icons and text sizes are significantly increased for better readability.

Simplified layout: The Home screen shows only essential apps, and swiping left reveals a dedicated Quick Contacts page for easy access to important phone numbers.

Touch and hold delay: Users can adjust the time required for a press-and-hold action (from 0.3 to 1.5 seconds) to prevent accidental menu triggers.

High contrast keyboard: Changes the keyboard colors (e.g., to yellow with black letters) to improve visibility.