



moto g



At a glance



Start



Home screen & apps



Control & customize



Calls



Contacts



Messages



Email



Type



Google Apps™



Browse



Photos & videos



Music



Books



Games



Locate & navigate



Organize



Connect & transfer



Protect



Want more?



Troubleshoot



Safety



Hot topics



Search topics



At a glance

a quick look

At a glance
First look
Top topics

First look

Let's get started! We'll guide you through startup and tell you a bit about your phone's features.

And when you're ready, customize your phone to match your style with Motorola Shells (sold separately and not available in all countries).

Note: Software updates happen frequently, so your phone may look a little different.



Tips & tricks

- **Start:** Ready to start? See “**Start**”.
- **Top topics:** Just want a quick list of what your phone can do? See “**Top topics**”.
- **Help:** All your questions about your new phone answered right on your phone. Tap Apps (☰) → ? **Help**. Want even more? See “**Get help & more**”.

Note: Certain apps and features may not be available in all countries.

SAR This product meets the applicable national or international RF exposure guidance (SAR guideline) when used normally against your head or, when worn or carried, at a distance of 1.5 cm from the body. The SAR guideline includes a considerable safety margin designed to assure the safety of all persons, regardless of age and health.

Caution: Before using your phone, please read the safety, regulatory and legal information at www.motorola.com/mymotog.



Menu

More



Back

Next





At a glance

At a glance
First look
Top topics



Menu

More



Back

Next



Top topics

Check out what your phone can do.

Find these fast: Wi-Fi, airplane mode, flashlight, and more.	"Quick settings"
Choose new wallpaper, sounds, and more.	"Redecorate your home screen"
Probably more megapixels than your average camera.	"Take photos"
On some phones, you can watch high definition TV.	"Quick Start: Digital HDTV"
Go on the internet.	"Browse"
Browse, shop, and download apps.	"Download apps"
Keep your info safe. Lock your screen and more.	"Protect"
Never get lost again.	"Locate & navigate"
Save data charges. Use Wi-Fi.	"Wi-Fi networks"
Stuck? Confused?	"Help & more"



Start

let's get up & running

Start

Remove the back cover
Put in the cards & power on
Battery life
Sign in
Old phone to new phone

Remove the back cover

Your phone is water resistant, but it depends on you putting the cover on properly. If you need to remove the cover to insert cards, be sure to replace it properly to ensure water resistance.

 
Take off the back cover.

Put your finger in the bottom corner hole in the cover and pry it off. Don't be afraid to use a little muscle.



Put on the back cover.

Press all the way around the camera area and the cover's edges for a water-resistant seal.

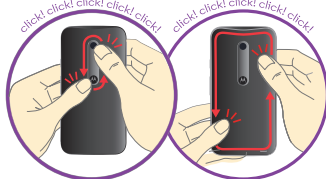

Caution: Don't use tools to remove the cover—doing so may damage your phone.

Water resistance note: This device is IPX7 water resistant—not waterproof. Avoid prolonged exposure to water. Do not submerge in more than three feet of water or for longer than 30 minutes.



Menu

More



Back

Next





Start

Start

Remove the back cover
Put in the cards & power on
Battery life
Sign in
Old phone to new phone



Menu

More



Back

Next



Put in the cards & power on

Note: In some countries, you can use a second SIM card.

 
Put in the SIM and optional microSD cards.

Caution: Make sure you use the correct size SIM cards, don't cut the SIM card, and don't use adapters with your SIM cards.

1

Put in the SIM and memory cards.

With the gold contacts facing down, push in a card.

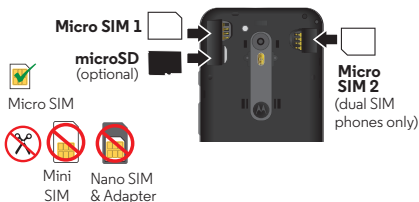

2

Power on.



Press and hold
Power until the
screen lights
up.




Note: The memory card (microSD) won't go in as far as the SIM.

Dual SIM phone settings

With a dual SIM phone, you can use one or two SIM cards. If there's only one SIM in the phone, it's ready to use. With two cards inserted, you can use either or both.

To set up your phone to use two SIM cards, insert both cards, turn on your phone, and follow the prompts. To finish dual SIM setup, drag down the status bar at the top of the home screen and tap **Welcome to your dual SIM**.

Tip: With two SIM cards, you see  at the top of your home screen.



Start

Remove the back cover
Put in the cards & power on
Battery life
Sign in
Old phone to new phone



Menu

More



Back

Next



Dual SIM with intelligent calling

Your phone learns your usage patterns to choose the best SIM for an outgoing call. Your phone automatically prompts you in the status bar to enable this feature. Or, you can enable it anytime by touching **Apps** → **Settings** → **SIM cards** → **Call settings** → **Phone account settings** → **Make calls with**.

Tip: To make the screen sleep or wake up, press the Power button. To turn your phone on or off, press and hold it.

Battery life

Your phone is like a small computer that processes tons of information and apps at lightning fast speed. Depending on what you use, that can take a lot of power.

To see what's using up battery power, tap **Apps** (☰) → **Settings** → **Battery**.

To turn on Battery saver, tap **Apps** (☰) → **Settings** → **Battery**, then tap **Menu** (☰) → **Battery saver**.

Tips & tricks

To save even more battery life between charges, you could reduce:

- Wi-Fi and Bluetooth® use: Tap **Apps** (☰) → **Settings**, then tap **Wi-Fi** or **Bluetooth** to turn them off when you don't need them.
- GPS use: Tap **Apps** (☰) → **Settings** → **Location** → **Mode** → **Battery saving** to turn off GPS tracking.

- Display brightness: Tap **Apps** (☰) → **Settings** → **Display** → **Brightness level** → (slide dimmer setting left). Make sure **Adaptive brightness** is also turned on.
- Display timeout delay: Tap **Apps** (☰) → **Settings** → **Display** → **Sleep** → (shorter setting).
- Widgets that stream information to your home screen, like news or weather.
- Unused online accounts that you registered: Tap **Apps** (☰) → **Settings** → **Accounts**. Tap the account you want to remove. Tap it again, then tap **Menu** (☰) → **Remove account**.
- Recording or watching videos, listening to music, or taking pictures.

Warning: Don't try to remove or replace the battery yourself—doing so may damage the battery and could cause burning and injury. If your phone becomes unresponsive, try a reboot—press and hold the Power button until the screen goes dark, and your phone restarts.



Start

Start

- Remove the back cover
- Put in the cards & power on
- Battery life
- Sign in
- Old phone to new phone



Menu

More



Back

 
Next



Sign in




If you use Gmail™, you already have a Google™ account—if not, you can create an account now. Signing into your Google account lets you use Google apps, see your contacts, appointments, photos, and more.

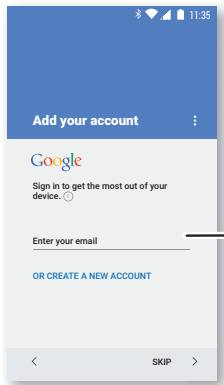Just select your language and follow the screen prompts to get started.



Sign in to see your contacts, appointments, and photos.

Tips & tricks

- **Wi-Fi network:** For faster internet access or to conserve data use, swipe the status bar down with two fingers, tap , and then tap **Wi-Fi**. There's more in "**Wi-Fi networks**".
- **Accounts:** To add, edit, or delete accounts, tap Apps  →  **Settings** → **Accounts**, then tap **+** **Add account**. To set up email accounts, see "**Email**".
For help with your Google account, visit www.google.com/accounts.
- **Contacts:** To get your contacts from your old phone, you have options. If your old phone was also Android™ and you used the Android Backup and Restore feature, your contacts automatically appear on your new phone. Otherwise, use the Motorola Migrate app in "**Old phone to new phone**". Or, visit www.motorola.com/transfercontacts.

Note: This phone supports apps and services that may use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.



Start

Start

Remove the back cover
Put in the cards & power on
Battery life
Sign in
Old phone to new phone



Menu

More



Back


Next

 


Old phone to new phone

Copying your personal stuff from your old Bluetooth-enabled phone to your new phone is easy.

Note: If your old phone is an Android™ phone, download the Motorola Migrate app on Google Play™ on your old phone before you get started.

Find it: On your new phone, tap Apps (☰) →  **Migrate**

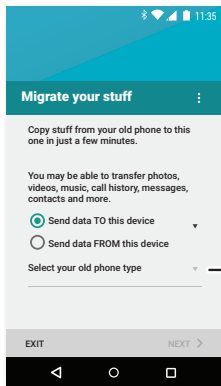

Select your old phone type.

Tips & tricks

- While you're migrating, you can keep using your phone.
- Signing into your Google account copies your apps if they are backed up to the cloud.
- For iPhones, you can migrate contacts and calendar events only from the iCloud.
- For phones that support copying music, not all music can be copied. (If you want to know more, you can search online to learn about digital rights management or DRM-protected files.)
- Older phones that are not Android or iPhone must have Bluetooth™ capability.



Home screen & apps

you have quick access

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone



Menu

More





Back

 
Next



Quick start: Home screen & apps

The home screen is what you see when you first turn on your phone. From here, you can explore apps and more.

- **Search:** Type text in the Google Search box at the top of your home screen, or tap  to search by voice.
- **Open app list:** To see your apps, tap Apps .

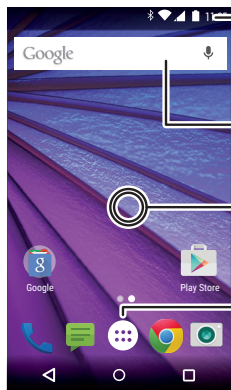





Swipe down with one finger for notifications or with two fingers for settings.

Search by typing or say "OK, Google".

Touch and hold an empty spot for widgets, wallpaper, and more.

Tap Apps to see all your apps.

Tips & tricks

- **Widgets:** To put widgets like a clock, interactive calendar, and more on your home screen, touch and hold an empty spot on the home screen, then tap **WIDGETS**.
- **Pages:** To add a page, drag an app to the right side of the screen until you see a white bar. You can add multiple pages. To show other pages of shortcuts and widgets, swipe the home screen left.
- **Google Now™:** Touch and hold Home , then flick up to the Google icon . After setup, you can access it by swiping right from the home screen.
- **Settings:** To quickly open settings, swipe the status bar down with two fingers and tap .
- **Apps:** To uninstall apps, tap Apps , touch and hold an app, then drag it to **Uninstall**. (You can't uninstall some apps).

To remove an app from a home screen page, touch and hold the app, then drag it to **Remove**. The app isn't removed from your phone, just the home screen.

- **Customization:** For more about changing your home screen, see "**Redecorate your home screen**".



Home screen & apps

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone



Menu

More



Back

 
Next



Help & more

Watch a tutorial. Read a how-to. Talk to someone. Find out anything about your phone.

Find it: Apps → **Help**

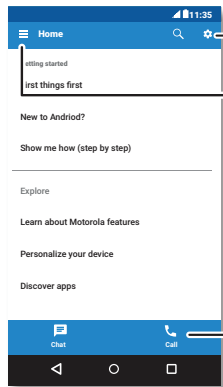

Let us suggest a few changes for you.

Watch tutorials, read how-tos, and more.

Need a real-live, actual human? Chat or call us.

Search

At the top of the home screen, tap the Google Search box for a text search or tap to search by voice.

When you type, suggestions appear below the search field:

 
- To search for a suggestion, tap it.
- To search for text in the search field, tap on the keyboard.

Tip: To close the keyboard, tap .

Status & notifications

At the top of the screen, icons on the left notify you about new messages or events. If you don't know what an icon means, swipe the status bar down for details.

Tip: Getting too many notifications? Touch and hold a notification to see which app is sending them to you. Then you can turn them off.

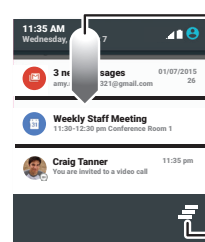

Swipe down to see notifications.

Tip: To clear just one, flick it to the left or right.

Clear notifications.

Tip: To quickly change common settings, swipe the status bar down with two fingers. For more, see "**Quick settings**".



Home screen & apps

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone


Icons at the top right of your screen tell you about phone status:

Network strength	No sound
Wi-Fi in range/connected	Vibrate
Bluetooth® on	Priority
Airplane mode	Alarm set
Battery charging/full	Warning

Note: Apps you download on Google Play™ might show other icons in the status bar to alert you to specific events.

Volume

 Press the side volume button up or down to select a volume from high to vibrate

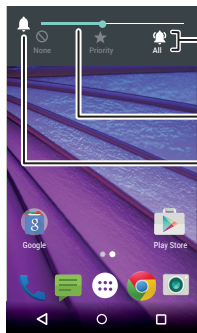

Set the notifications and alarms to hear.

Set the volume using the side volume buttons.

Change to vibrate or back to ring.

Also, tap one of these options for more settings:

- **All:** Receive all notifications and alarms.
- **Priority:** Tap to select which interruptions to receive. You will always hear alarms. Set when you want to be in this mode, or choose indefinitely.
- **None:** Turn off all sounds and alarms. Override sound settings from other apps. Set how long to stay in this mode, or choose indefinitely.

Discover your Moto apps

Moto apps can simplify life and help you out. Just follow the prompts to find out more.

Find it: Apps →

- **Assist:** Set your phone's behavior based on what you're doing. For example, keep alarms quiet at night while you're sleeping.
- **Actions:** Learn how to open your camera with two twists of your wrist using Quick Capture. See "**Photos & videos**" for more details.
- **Display:** See messages, calls, and other notifications—even if your phone is asleep.



Menu

More



Back

Next





Home screen & apps

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone



Menu

More

 


Back

Next



Note: Your phone may not have all features.

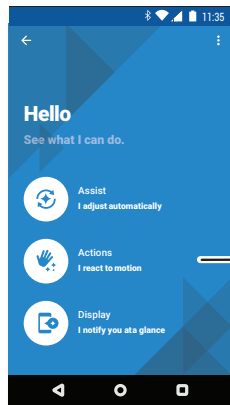

Select a feature
to learn more.

Tip: Want to hide sensitive or private notifications? Tap Apps (⋮) → **Moto** → **Display** and set which apps can show notifications and how much to display.

Download apps

Google Play™

Get music, movies, books, apps, games, and more.

Find it: Apps (⋮) → **Play Store**

- **Find:** To search for apps, tap 🔍.
- **Download:** To download an app you found, tap it to see details, then tap **INSTALL**, or the price.
- **Share:** To share an app you found on Google Play, tap it to see details and then tap ➦.
- **Reinstall:** To show or reinstall apps you downloaded from Google Play, tap ☰ → **My apps**.
- **Use a computer:** To find and manage apps from any computer, go to <http://play.google.com> using your Google account and password.

There, you can browse apps on the big screen, manage your apps across multiple devices (like a phone and tablet), and even set new apps to download to your devices.
- **Enjoy music, movies, books, and more:** You can also use Google Play to download music, movies, books, and more. See **“Play Music”**, **“Play Games”**, and **“Play Books”**.
- **Get help:** To get help and more, tap ☰.

Apps from the web

You can get apps from other online app stores using your browser.

Tip: Choose your apps and updates carefully, as some may impact your phone's performance—see **“Choose carefully”**.

Note: When installing an app, make sure you read the alerts that tell you what information the app will access. If you don't want the app to access this information, cancel the installation.



Home screen & apps

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone



Menu

More



Back

Next



To let your phone install apps that are not on Google Play, tap Apps (☰) → ⚙️ **Settings** → **Security** and check **Unknown sources**.

For information about downloading files from your browser, see “**Downloads**”.

Choose carefully

Here are a few tips:

- To help prevent spyware, phishing, or viruses, use apps from trusted sites, like Google Play.
- In Google Play, check the app’s ratings and comments before installing.
- If you doubt the safety of an app, don’t install it.
- Apps use up memory, data, battery, and processing power—some more than others. If you’re not happy with how much memory, data, battery or processing power it’s using, uninstall it.
- Monitor children’s access to apps to help prevent exposure to inappropriate content.
- Certain apps may not provide completely accurate information. Take care, especially when it comes to personal health.

Take care of your apps

Find it: Apps (☰), then swipe left to scroll through apps

To close the apps screen, tap Home (○) or Back (◀).

- **Uninstall apps:** Tap Apps (☰) → ⚙️ **Settings** → **Apps**. Swipe left to **ALL**, tap an app, then tap **Disable** or **Uninstall** in the top right (if available).

Disable removes the app from your menu—to **Enable** it, reopen this window and tap **Enable** (disabled apps are at the bottom of the list).

If an app locks up your phone as soon as you turn it on, restart in Safe Mode: Turn off your phone, then turn it back on—when you see the “Motorola” logo during power-up, press and hold both volume buttons until you see the home screen, with **Safe Mode** in the lower left. Then, try removing the app.

- **Reinstall apps:** To reinstall apps from Google Play, tap Apps (☰) → 📺 **Play Store**, then tap ☰ → **My apps**. The apps you downloaded are listed and available for download.
- **See or clear app details:** Tap Apps (☰) → ⚙️ **Settings** → **Apps**. Swipe left or right to see the list of **DOWNLOADED**, **RUNNING**, or **ALL** apps, then tap an app in the list to see its details and storage usage. You can tap **Clear data**, **Clear cache**, or other options.

Tip: To quickly show app details, tap Apps (☰), touch and hold an app, then drag it to **App info**.
- **See app data usage:** To see which apps are using the most data, tap Apps (☰) → ⚙️ **Settings** → **Data usage**. For more, see “**Data use**”.



Home screen & apps

Home screen & apps

Quick start: Home screen & apps

Help & more

Search

Status & notifications

Volume

Discover your Moto apps

Download apps

Take care of your apps

Update your phone



Menu

More



Back

Next





Update your phone

Use your phone or computer to check, download, and install phone software updates:

- Using your phone:

If your phone notifies you about an update, follow the instructions to download and install it.

To manually check for updates, tap Apps  →  **Settings** → **About phone** → **System updates**.

Your phone downloads updates over your Wi-Fi connection (if available) or mobile network. We recommend that you download updates over a Wi-Fi connection. Remember, these updates can be quite large (25MB or more) and may not be available in all countries. If the mobile network updates are not available in your country, update using a computer.

- Using your computer:

On your computer, go to www.motorola.com/update.



Control & customize

how it acts & looks

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

 
Quick settings

Accessibility

Quick start: Control & customize

Take control of your phone:

- **Touch, press, and speak:** Learn phone gestures and commands. See “**Controls and gestures**”.
- **Change your sounds and more:** To put widgets like a clock, interactive calendar, and more on your home screen, see “**Customize sounds and appearance**”.

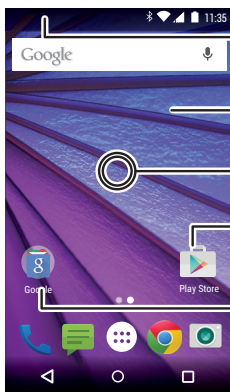

Swipe down with two fingers to see quick settings. Swipe down with one finger to see notifications.







Tap a widget to modify it. Touch and hold to resize it.

Touch and hold an empty spot to change wallpaper.

Tap a shortcut to open. Touch and hold to move or delete.

Drag shortcuts on top of each other to make a group.




Tips & tricks

- **Speak:** Tap  in a search window, or  on a keyboard.
- **Add a home screen page:** Drag an icon to the right side of the home screen until you see a white bar. You can add multiple pages.
- **Quick settings:** To change **Wi-Fi, Bluetooth, Airplane mode**, and other settings, swipe the status bar down with two fingers. For even more settings, tap  **Settings**.
- **Can't find a setting?** Tap Apps  →  **Settings** → .

Controls and gestures

Touch

Find your way around:

- **Tap:** Choose an icon or option.
- **Touch and hold:** Open options for items in lists.
- **Drag:** Move items on the home screen.
- **Swipe:** Scroll through lists or between screens.
- **Pinch or double-tap:** Zoom in and out on websites, photos, and maps.
- **Twist:** Twist a map with two fingers to rotate it, and pull two fingers down to tilt it.
- **Back:** Tap Back  to go to the previous screen.
- **Home:** Tap Home  to return to the home screen.
- **Overview:** Tap Overview  to see your recent apps (or browser tabs), and tap an app to reopen it. To remove an



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

Customize sounds and appearance




Redecorate your home screen

Quick settings

Accessibility

app from the list, swipe it left or right. To scroll the list, swipe up or down.

Tip: You don't need to remove apps from Overview for your phone to run efficiently.

 
- **Menus:** When  or  appears on a screen, you can tap it to open options for the current screen.
- **Close keyboard:** To close a touchscreen keyboard, tap .
- **Reboot:** To reboot your phone, press and hold the Power button until the screen goes dark and your phone restarts.

Press

Power button

Your power button helps in a few ways:

- **Power off:** Press and hold the Power button to choose **Power off**.
- **Sleep:** To conserve battery power, prevent accidental touches, or when you want to wipe smudges off your touchscreen, put the touchscreen to sleep by pressing the Power button.
- **Wake up:** Press the Power button again.

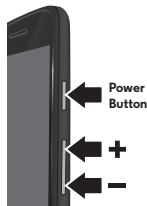

Tip: To add security to your phone, see “**Protect**”.

Volume buttons

Your volume buttons help in a few ways:


- **Ringer volume:** Press the buttons when your phone is ringing to silence it.
- **Earpiece volume:** Press the buttons during a call.
- **Music/video volume:** Press the buttons during a song or video.



Tip: For more on volume control, see “**Volume**”.


Speak

Just tell your phone what you want.

Tip: Speak naturally but clearly, like using a speakerphone.

- **Search:** Tap  on the home screen to search by voice, or say, “OK Google” to speak your search.

To change your voice input and text-to-speech settings, tap Apps  →  **Settings** → **Language & input**.

- **Dialing and commands:** Tap . To dial, say “Call” and then a contact name or phone number. Or, say a command like “Send text,” “Go to” an app, or “Help” for voice command help.

Tip: If a contact has more than one number, you can say which number to call. For example, “Call Joe Black Mobile” or “Call Suzi Smith Work.”



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures


On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

Quick settings

 
Accessibility




- **Text entry:** On a touchscreen keyboard, tap , then speak your message or search text. You can also speak punctuation.

Tip: To make your phone read out loud, see “TalkBack”.

On, off, lock & unlock

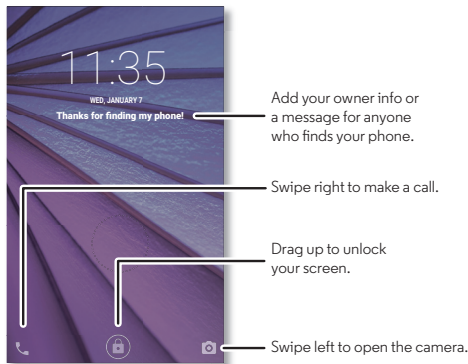



Your touchscreen is on when you need it and off when you don't. To turn the screen on, press the Power button.



- **Screen off and on:** Press the Power button to turn the screen off and on.
- **Screen lock:** To unlock the screen, tap  and drag up. To use a password, pattern, or PIN security to unlock your screen, tap Apps  →  **Settings** → **Security** → **Screen lock**



(see “Screen lock”).

- **Notifications:** Double tap a notification to open it. You'll be prompted to enter your passcode.

Tip: To choose which notifications to show, tap Apps  →  **Settings** → **Sound & notification** → **App notifications**. Then tap Apps  →  **Settings** → **Display** → **Screen notifications**.







- **Owner info:** To add a message to your lock screen, tap Apps  →  **Settings** → **Security** → **Owner info**. To set your message, just tap Back .

Tip: Don't put your mobile number as your contact info unless you can access your voicemail from another device.

- **Screen timeout:** To change your timeout (screen locks automatically), tap Apps  →  **Settings** → **Display** → **Sleep**.

Customize sounds and appearance

Customize your phone's sounds and appearance:

- **Ringtone and notifications:** Tap Apps  →  **Settings** → **Sound & notification**.
- **Vibrate or silent:** To make your phone vibrate for incoming calls, tap Apps  →  **Settings** → **Sound & notification** → **Also vibrate for calls**. To turn off ringtones for incoming calls, tap Apps  →  **Settings** → **Sound & notification** → **Phone ringtone** → **None**.



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures


On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

Quick settings

Accessibility

- **Ringtone for a contact:** To set a personal ringtone for a contact, tap Apps (☰) → **Contacts**, and tap the contact. Tap , then tap Menu (☰) → **Set ringtone**.
- **Message alert:** To change your message notification settings, tap Apps (☰) → **Messaging** → Menu (☰) → **Settings**, and check **Notifications**.
- **Display settings:** To change brightness, animation, and other display settings, tap Apps (☰) → **Settings** → **Display**.
- **Rotate:** In many apps, the touchscreen switches from portrait to landscape when you rotate your phone. To turn this on or off, swipe down the status bar with two fingers and tap **Auto-rotate**.
- **Wallpaper:** To change your wallpaper, touch and hold an empty spot on your home screen. For more, see “Redecorate your home screen”.
- **Language and region:** To set your menu language and region, tap Apps (☰) → **Settings** → **Language & input** → **Language**.


Redecorate your home screen

For quick access to your favorite things, customize your home screen the way you want.

- **Change wallpaper:** Touch and hold an empty spot on your home screen and tap **WALLPAPERS**.
- **Add a home screen page:** Drag an app to the right side of the home screen until you see a white bar. You can add multiple pages.

- **Add shortcuts:** Tap Apps (☰), touch and hold the app, then drag it to one of your home screen pages. To see all your apps, tap Apps (☰) and swipe to the left.
- **Create shortcut folders:** Drag one shortcut onto another. Add more shortcuts by dragging them onto the first shortcut. To name the folder, tap it, tap the name, and type a new name.
- **Customize your phone and home screen:** To put widgets like a clock, interactive calendar, and more on your home screen, touch and hold an empty spot on the home screen.
- **Add widgets:** To put widgets like a clock, interactive calendar, and more on your home screen, touch and hold an empty spot on the home screen. Then tap **WIDGETS**.
- **Resize widgets:** You can resize some widgets—touch and hold a widget until you feel a vibration, then release. Drag the white circles at the edges to resize.
- **Move or delete widgets and shortcuts:** Touch and hold a widget or shortcut until you feel a vibration, then drag it to another spot, another page, or **Remove**.
Note: Removing a shortcut from your home screen doesn't uninstall the app from your phone.

Quick settings

For quick access to **Wi-Fi**, **Bluetooth**, **Brightness**, **Airplane mode**, and other settings, swipe down the status bar or the lock screen with two fingers. For even more settings, tap .

Need help finding this screen? See “**Status & notifications**”.



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

 
Customize sounds and appearance

Redecorate your home screen

Quick settings

Accessibility

Note: Your quick settings may look a little different.

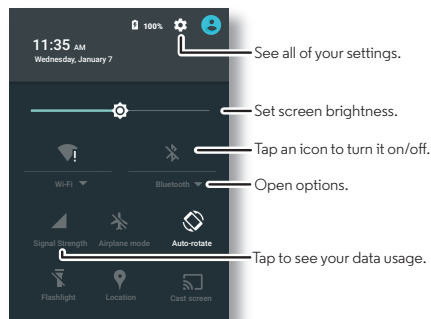

Tip: Your phone has a flashlight that you can turn on and off from this screen or make a “chop chop” motion with your hand.

Accessibility

See, hear, speak, feel, and use. Accessibility features are there for everyone, helping to make things easier.

Find it: Apps (⋮) → **Settings** → **Accessibility**

Note: For general information, accessories, and more, visit www.motorola.com/accessibility.

Voice recognition

Just tell your phone what you'd like to do—dial, browse, search, send a text, and more. Check it out—say the prompt to

ask your phone a question. Tap  at the top of the home screen for voice search.

TalkBack

Use TalkBack to read your screen out loud—your navigation, your selections, even your books.

To turn on TalkBack, tap Apps (⋮) → **Settings** → **Accessibility** → **TalkBack**, then tap the switch to turn it on.

Note: You might need to download text-to-speech software (data charges may apply).

To use TalkBack:

- **Menus and screens:** Tap an item in a menu or screen. Your phone speaks the name.
- **Dialer and text entry:** Start typing. Your phone speaks each number or letter.
- **Notifications:** Drag the status bar down. Your phone speaks all of the notifications.
- **Books and more:** Open a book, file, message, and more. Your phone reads the text out loud (app dependent).
- **Browsers:** Enable web pages in your browser to be read out loud. Move between pages, paragraphs, lines, words, or characters.

Tip: Navigate through your apps and menus to hear how voice readouts work on your phone.



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures



On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

Quick settings

Accessibility


To pause/resume TalkBack, wave your hand over the screen. To activate this feature, tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS** → **Use proximity sensor**.

Tip: If Explore by touch is on, swipe down then right to open the global context menu, then use the menu to pause TalkBack.

To turn off TalkBack, tap Apps  →  **Settings** → **Accessibility** → **TalkBack**, then tap the switch to turn it off.

Explore by touch



Use Explore by touch to expand TalkBack, and have your touches read out loud as you move your finger around the screen.

To turn on Explore by touch when TalkBack is active, tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS** → **Explore by touch**.



Tip: When you turn on TalkBack for the first time, your phone asks if you want to **Enable Explore by touch?** Tap **OK** to turn it on.



Explore by touch changes your phone's touch gestures so the location of your touches can be read out loud.

- **Tap** something on the screen to hear a description or text readout.
- **Double-tap** anywhere on the screen to open or activate the last touched item.
- **Swipe** using two fingers to scroll through lists or between screens.

Shortcut gestures let you navigate your phone with simple swipe gestures (for example, swipe up then left in a single motion to go to the home screen). To see or change these shortcuts, tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS** → **Manage gestures**.







Note: The way these gestures are interpreted is specific to TalkBack. Other accessibility services may use the same gestures for different actions.

To learn more about navigating your phone with Explore by touch, tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS** → **Launch "Explore by touch" tutorial**.

To turn off Explore by touch when TalkBack is active, tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS**, and uncheck **Explore by touch**.

Braille

Combine your Braille display with TalkBack for braille and speech feedback.

- 1 Download the BrailleBack app from Google Play (tap Apps  →  **Play Store**), and install it on your phone.
- 2 Tap Apps  →  **Settings** → **Accessibility** → **BrailleBack**.
- 3 Turn on your Braille display and put it in Bluetooth® pairing mode.
- 4 On your phone, tap Apps  →  **Settings** → **Bluetooth**, then tap the Bluetooth switch to turn it on and scan.
- 5 Tap the name of your Braille display to pair it with the phone.



Menu

More



Back

Next





Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

Quick settings

Accessibility



Menu

More





Back

Next









Accessibility shortcut

Use simple gestures to quickly activate TalkBack and other accessibility features on your phone. For more information, tap Apps  →  **Settings** → **Accessibility** → **Accessibility shortcut**.

Caller ID

When you want to hear who's calling:

- **Read out loud:** Have your caller announced—tap Apps  →  **Settings** → **Accessibility** → **TalkBack** → **SETTINGS** → **Speak Caller ID**.
- **Ringtone:** Assign a unique ringtone to a contact. Tap Apps  →  **Contacts**, and tap the contact. Tap , then tap Menu  → **Set ringtone**.

Volume & vibrate

Find it: Apps  →  **Settings** → **Sound & notification** →

Volumes or Vibrate when ringing

- **Volumes** opens sliders that let you set different volumes for your music or videos, ringtone, text or email notifications, and alarms.
- **Vibrate when ringing** determines whether your phone vibrates for incoming calls (even if the ringer is silent).

Tip: For more on volume control, see “**Volume**”.












Zoom

Get a closer look.

- **Pinch to zoom:** Pinch to zoom on maps, web pages, and photos—to zoom in, tap the screen with two fingers and

then drag them apart. To zoom out, drag your fingers together.

Tip: To zoom in, you can also double-tap.

- **Screen magnification:** Triple tap the screen for full screen magnification, or triple tap and hold to temporarily magnify. Tap Apps  →  **Settings** → **Accessibility** → **Magnification gestures**.
- **Big text:** Show bigger text throughout your phone. Tap Apps  →  **Settings** → **Accessibility** → **Large text**.
Tip: Or tap Apps  →  **Settings** → **Display** → **Font size** → **Huge**.
- **High contrast text:** Show higher contrast text throughout your phone. Tap Apps  →  **Settings** → **Accessibility** → **High contrast text**.
- **Browser:** Choose text scaling and other accessibility settings for your browser. Tap Apps  →  **Chrome** → Menu  → **Settings** → **Accessibility**.
Tip: Use **Force enable zoom** to allow zooming on all webpages.

Display brightness

Your phone automatically adjusts the screen brightness when you're in bright or dark places. But you can set your own brightness level instead:

Swipe down the status bar with two fingers, and slide the bar to adjust.



Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen

Quick settings

Accessibility



Menu

More



Back

Next



Note: Setting brightness to a high level decreases your phone's battery life.


Touchscreen & keys

To hear or feel when you tap the screen, tap Apps (☰)

→ **Settings** → **Sound & notification** → **Other sounds**:

- **Touchscreen:** To hear a click when you tap something on the screen, select **Touch sounds**.
- **Keys:** To feel a vibration when you tap the keyboard, select **Vibrate on touch**.
- **Screen lock:** To hear a click when you lock or unlock the screen, select **Screen lock sounds**.


Messages

To make text entry even easier, use features like auto-capitalization, auto-correction, and more. Tap Apps (☰) → **Settings** → **Language & input**, then tap a keyboard type. Of course, if you don't want to type at all, use your voice. Tap  on the touchscreen keyboard.

Hearing aids

 
To help get a clear sound when using a hearing aid or cochlear implant, your phone may have been rated for use with hearing aids. If your phone's box has "Rated for Hearing Aids" printed on it, then please read the following guidance.

Note: Ratings are not a guarantee of compatibility (visit www.motorola.com/hacphones). You may also want to consult your hearing health professional, who should be able to help you get the best results.


• **Settings:** Tap  **Phone** → Menu (☰) → **Settings** → **Calls** → **Hearing aids**.

• **Call volume:** During a call, press the side volume buttons to set a call volume that works for you.

• **Position:** During a call, hold the phone to your ear as normal, and then rotate/move it to get the best position for speaking and listening.

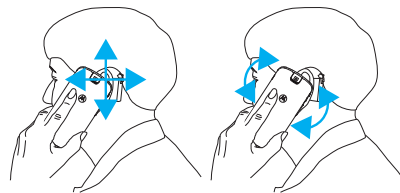

TTY

You can use your phone in TTY mode with standard teletype machines. Tap  **Phone** → Menu (☰) → **Settings** → **Calls** → **TTY mode** and select the mode you need:

- **TTY Full:** Type and read text on your TTY device.
- **TTY HCO:** Hearing-Carry-Over—type text on your TTY device and listen to voice replies on your phone's speaker.
- **TTY VCO:** Voice-Carry-Over—speak into your phone and read text replies on your TTY device.

Note: You'll need a cable/adaptor to connect your TTY device to the headset jack on your phone.



Control & customize

Control & customize

Quick start: Control & customize

Controls and gestures

On, off, lock & unlock

Customize sounds and appearance

Redecorate your home screen



Quick settings

Accessibility

Refer to your TTY device guide for mode and usage information.

Apps

Google Play has something for everyone, and many apps provide useful accessibility features.

Find it: Apps  →  **Play Store**



Menu

More



Back

Next





Calls

when you need to talk

Calls

Quick start: Calls

Make calls

Answer & end calls

Recent calls

3-way calls

Your phone number

Emergency calls



Menu

More



Back



Next

 


Quick start: Calls

Dial contacts, recent calls, or numbers, all from one app.

Find it:  **Phone**


 


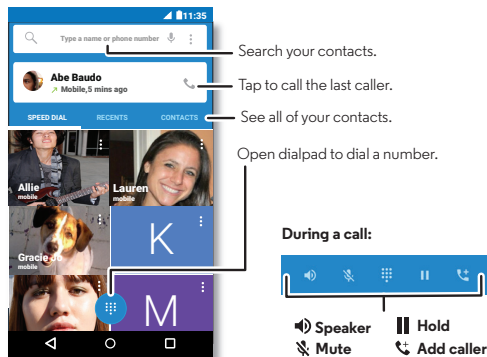- To call a contact or recent call, tap it.
- To open the dialpad, tap . Enter a number, then tap  to call it.



During a call:





-  Speaker
-  Mute
-  Dialpad
-  Hold
-  Add caller

Tips & tricks

- **During a call:** Your touchscreen goes dark to avoid accidental touches. To wake it up, move it away from your face or press the Power button.
- **Multi-task:** While you're on a call, tap Home  to hide the call screen and look up a phone number, address, or open other apps. To reopen the call screen, swipe down the status bar and tap **Ongoing call**.
- **Contacts:** To search your contacts, tap **CONTACTS**.
- **Favorite contact:** Have someone you call all the time? Touch and hold an empty spot on your home screen, tap **WIDGETS**, then touch and hold the **Direct dial** widget. Drag it to your home screen, then select the contact. Tap the widget to dial the person.
- **Voicemail:**  appears in the status bar when you have new voicemail. To hear it, tap  **Phone** → , then touch and hold **1**.

Make calls

When you make a call, you have options:

- Tap  **Phone**, to see your recent calls, favorites, and frequently-called contacts. Select a contact or number to call it.
- To dial a number, tap , enter a number, then tap  to call it.
- To enter the international dialing code (+), touch and hold **0**. To add a pause or wait after numbers, tap Menu .



Calls

Calls

Quick start: Calls

Make calls

Answer & end calls

Recent calls

3-way calls

Your phone number

Emergency calls



Menu

More



Back

Next



Answer & end calls

- **Answer a call:** When your phone is unlocked, tap **ANSWER**.

Note: When your phone is locked, swipe right to answer a call.

With call waiting on, tap and drag to to answer the new call, then tap **Hold current call + Answer** or **End current call + Answer**.

- **Ignore a call:** When your phone is unlocked, tap **DISMISS**. If locked, swipe left to send the call to voicemail. You can also press the Power button to ignore the call or press a volume button to silence the ringer.
- **Respond with a text:** To send a pre-set message to an incoming caller, tap the caller's name (if visible). Tap and drag to .
- **End a call:** Tap .
- **During a call:** Tap **Mute** to mute the call. To hide the call screen, tap Home . To reopen it, swipe down the status bar and tap **Ongoing call**.

Note: When you hold your phone to your ear, the touchscreen goes dark to avoid accidental touches. When you move your phone away from your ear, the screen lights up again.

Don't use covers or screen protectors (even clear ones) that cover the proximity sensor.

Recent calls

View your calls (with newest first), and then call, text, or store them:

Find it: **Phone** → **RECENTS**

- To call a number, tap a contact name, then tap **CALL BACK**.
- To send a text message, store the number, or other options, tap the contact picture.
- To remove an entry from the call log, tap it, then tap **DETAILS** → .
- To clear the list, tap Menu → **Call History**, then tap Menu → **Clear call log**.

3-way calls

During a call, you can start another call, switch between them, or join them in a 3-way call:

- To answer a second call, tap and drag to . To ignore it, tap and drag to .
- To dial a second call, tap +, enter a number, then tap to call it.

The first call goes on hold if you answer the second call. To switch between calls, tap .

The first call goes on hold when you tap +. To join the calls after the second call answers, tap .



Calls

Calls

Quick start: Calls

Make calls

Answer & end calls

Recent calls

3-way calls

Your phone number

Emergency calls



Menu

More



Back

Next






Your phone number

Find it: Apps  → Settings  → About phone → Status → My phone number

Note: May not be available in all countries.

Emergency calls

Note: Your service provider programs one or more emergency phone numbers that you can call under any circumstances, even when your phone is locked. Emergency numbers vary by country. Your pre-programmed emergency number(s) may not work in all locations, and sometimes an emergency call cannot be placed due to network, environmental, or interference issues.

- 1 Tap  **Phone** (if your phone is locked, drag  up to unlock it, then tap **EMERGENCY CALL**).
- 2 Enter the emergency number.
- 3 Tap  to call the emergency number.

Note: Your phone can use location based services (GPS and AGPS) to help emergency services find you. See “Location Services” in your Legal Guide.



Contacts

you can be a people person

Contacts

Quick start: Contacts

Create contacts

Call, text, or email contacts

Favorites

Edit, delete, or hide contacts

Get contacts



Share contacts

 
My details

Quick start: Contacts

Combine information from your Google™ contacts and social networks for quick access to everyone you know.

Find it: Apps  →  **Contacts**

- **Create:** Tap .
- **Edit or delete:** Tap a contact, then tap .
- **Call, text, or email:** Tap a contact, then tap an option.

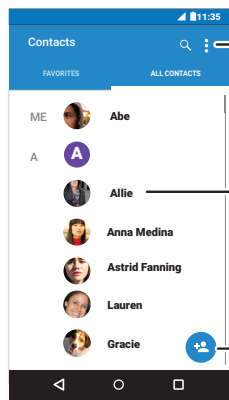


 



Sort contacts, change settings, accounts, & more.

Tap to view contact information, call, send a text message, and more.




Add a contact.

Tips & tricks

- **Search contacts:** From the home screen, tap the Google search box and enter a contact's name. Or, in the **Contacts** list, tap .
- **Send contacts:** Tap a contact, then tap Menu  → **Share** to send it in a message, or over a Bluetooth® connection.
- **Shortcuts:** Tap a contact, then tap Menu  → **Place on homescreen** to add a shortcut for this contact on your homescreen.
- **Synchronize:** On your phone, tap Apps  →  **Settings**. Go to the **ACCOUNTS** section, choose your Google account, then tap your account name to sync it if it has not recently been updated. You can also see these contacts at www.gmail.com.

For help with transferring contacts, learn about Motorola Migrate in "**Old phone to new phone**" or go to www.motorola.com/TransferContacts.

Create contacts

Find it: Apps  →  **Contacts** → 

Tap a text box to type the name and details. When you're finished, tap ✓ **DONE** at the top.

Note: To import contacts or change where they're stored, see "**Get contacts**".

Call, text, or email contacts

Find it: Apps  →  **Contacts**



Menu



More



Back



Next



Contacts

Contacts

Quick start: **Contacts**

Create contacts

Call, text, or email contacts

Favorites

Edit, delete, or hide contacts

Get contacts

Share contacts

My details



Menu

More



Back

Next



Tap a contact to see more options. Depending on the information you have for that person, you can call, text, or send email. You can also use voice recognition (see “**Speak**”).

Favorites

Set your most-used contacts as favorites, so you can get to them faster.

- To set a favorite, tap Apps → **Contacts**, select a contact and tap .
- To see your favorites, tap Apps → **Contacts** → **FAVORITES**.

Edit, delete, or hide contacts

Find it: Apps → **Contacts**

- To edit a contact, tap it, then tap . Tap a field to edit it. Tap to choose the contact's picture.
- To set a personal ringtone for the contact, tap it, tap then tap Menu → **Set ringtone**.
- To delete the contact, tap it, tap , then tap Menu → **Delete**.

Contacts from social networks will be hidden if you select **Delete**. To view these contacts, or delete them permanently, use the social network's app or website.

- To hide the contacts from an account in your **Contacts** list, tap Menu → **Contacts to display**. Tap an account type to show it. Tap **Customize** to uncheck accounts you always want to hide.

Get contacts

Get all your contacts in one place.

- To add your social networking contacts, tap Apps → **Settings** → **Accounts**, then tap **Add account**.
Note: You'll need a social networking app first. See “**Google Play™**” to get apps.
- To add your email contacts, see “**Email**”.
Tip: If you add a **Corporate Sync** account, you can send messages to your coworkers, even if you don't have them stored in your contacts.
- To import contacts from your SIM card (if it didn't happen automatically): Tap Apps → **Contacts** → Menu → **Import/export** → **Import from SIM card**. Tap **OK** to confirm.
- To import contacts from your computer, upload the contacts to your Google™ account at <http://contacts.google.com>. On your phone, tap Apps → **Contacts** → Menu → **Accounts** → Menu → **Auto-sync data**. You can also see these contacts at <http://mail.google.com>.

For help with transferring contacts, see “**Old phone to new phone**”.

Share contacts

Share a contact with a Bluetooth® connection, in a message, or using Google Drive™:

Find it: Apps → **Contacts**



Contacts

Contacts

Quick start: [Contacts](#)

[Create contacts](#)

[Call, text, or email contacts](#)


[Favorites](#)

[Edit, delete, or hide contacts](#)

[Get contacts](#)

[Share contacts](#)

[My details](#)

To share a contact, tap it, then tap Menu  → **Share** and choose how you want to send it.

Note: You can't share your social network contacts.

My details

Find it: Apps  →  **Contacts**

To store your user profile, tap **Set up my profile** under **ME** at the top of the contact list.



Menu

More



Back

Next





Messages

say it & go

Messages

Quick start: Messages

Read, forward & more

Set your default messaging app

Email

Chat using Hangouts™

 
Wireless Emergency Alerts (U.S. & some countries only)

Quick start: Messages

Stay in touch with messages and pictures.

Find it: Apps → **Messaging**

- **Create:** Tap .
- **Attach:** When you're typing a message, tap to attach a picture, video, or other file.
- **Send:** Tap to send the message.

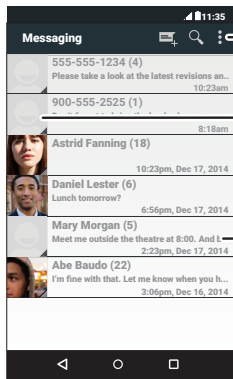

Create a new message, search messages, change notifications, and more.

Tap to add a contact.

Tap a conversation to open it. Touch and hold to delete the message and more.



Menu

More



Back

Next



Tips & tricks

- **Forward a message:** In a conversation, touch and hold a message for more options, such as forwarding it.
- **Save pictures:** Touch and hold a picture to save it. To see the picture, tap Apps → **Gallery**.
- **Voice entry:** Just tap a text box, then tap on the keyboard.
Tip: If you don't see on the keyboard, tap Apps → **Settings** → **Language & input** → **Google voice typing** to activate voice entry.
- **Text your best friend:** Use a widget to text your favorite contact quickly: Touch and hold an empty spot on the home screen, tap **WIDGETS**, touch and hold **Direct message** to drag it to your home screen, then choose a contact.

Read, forward & more

Find it: Apps → **Messaging**

- **Open:** Tap a conversation to open it.
- **Attachments:** When you open a message with an attachment, tap the attachment to open it, or touch and hold it to save it.
- **Reply:** Open a conversation, then enter your response in the text box at the bottom.
- **Copy, Forward or Delete:** Open a conversation, touch and hold the message you want, then tap an option. To delete a whole thread of messages, open the thread, then tap Menu → **Delete thread**.



Messages

Messages

Quick start: Messages

Read, forward & more

Set your default messaging app

Email

Chat using Hangouts™

Wireless Emergency Alerts (U.S. & some countries only)



Menu


More



Back

Next



- **Settings:** Tap Menu  → **Settings** to change your notifications and other options.

Set your default messaging app

You can also use Hangouts™ to send and receive your text messages.



To set  **Hangouts** or  **Messaging** as your default messaging app:

 
Find it: Apps  →  **Settings** → **More** → **Default SMS app**

For more about Hangouts, see “**Chat using Hangouts™**”.


Email

Send and receive email. Set up and manage accounts.

Find it: Apps  →  **Gmail**

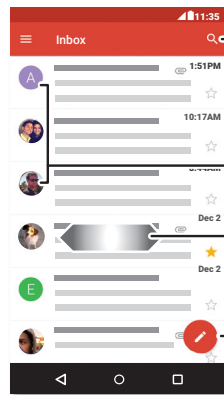




Tap to search mail.


Tap to choose multiple messages, then touch  to select an option.

Swipe left or right to archive a message.

Tap to compose a new email.

- **Add Gmail accounts:** The first time you turned on your phone, you probably set up or logged in to your Google™ account—that sets up the  **Gmail** app for one account.

To add more Google accounts, tap Apps  →  **Settings** → **Accounts**, then tap **+ Add account** → **Google**.

- **Add email accounts:** The Gmail app manages all of your email accounts. To add personal email accounts, follow the prompts when you first open the  **Gmail** app, or tap



Messages

Messages

Quick start: Messages

Read, forward & more

Set your default messaging app

Email

Chat using Hangouts™

Wireless Emergency Alerts (U.S. & some countries only)



Menu

More



Back

Next



Apps → **Settings** → **Accounts**, then tap **+** **Add account** → **Email**. For Microsoft® Exchange server work email accounts, tap **+** **Add account** → **Exchange**, and enter details from your IT administrator.

- **Change account settings:** To change Gmail™ account settings, tap Apps → **Settings** → **Accounts** → **Google**.
- **Delete accounts:** To delete a Gmail or email account, tap the account name, then tap Menu → **Remove account**.
- **Switch accounts:** To quickly switch between your email accounts, tap , and tap your other account at the top.

Chat using Hangouts™

Sign in with your Google account to stay in touch with friends and family.

Find it: Apps → **Hangouts**

- **Start a new hangout:** Tap **+**, then tap a name in your list of friends. You can send a text message, or tap to make a video call.
- **Change settings:** Tap to see your old hangouts, change your profile pic, other settings, and more.
- **Chat from a computer:** You can chat from a computer, too. Find out more at www.google.com/hangouts.

Wireless Emergency Alerts (U.S. & some countries only)

Wireless Emergency Alerts, also known as CMAS or PLAN, is a U.S. national emergency alert system. Emergency alerts can pop up to tell you about a national or local crisis. After you close an alert, you can reopen it by touching Apps → **Settings** → **More** → **Emergency broadcasts**.



Tip: Emergency alerts have a special sound and vibration that is two seconds long, followed by one second, then another one second.

To choose which types of alerts you receive, tap Apps → **Settings** → **More** → **Emergency broadcasts**. The U.S. and local governments send these alerts through your service provider. So you will always receive alerts for the area where you are, and you won't receive alerts if you're outside of the U.S.

For more, visit www.ctia.org/consumer_info/safety/.



Type

keyboard when you need it

 
Type

Quick start: Type
Text entry settings & dictionary
Cut, copy & paste

Quick start: Type



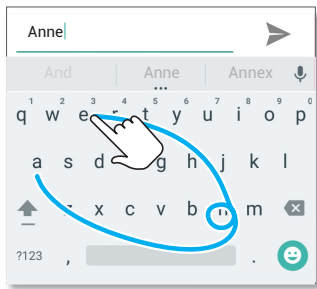


When you tap a text box, like in a message or search, you have keyboard options.

- **Type or gesture:** Enter letters by touching them one at a time. Or, enter a word by tracing a path through the letters.
- **Close the keyboard:** Tap ▾.



See a different keyboard? It varies by app. This one is for texting.

Tips & tricks

- **Move the cursor:** Tap a spot in the text to place the cursor, then drag the arrow under the cursor to move it.
- **Dictionary:** To add a word you enter often, enter it, tap the word in the word list below the text box, then tap there again to add it to your dictionary.
- **Symbols:** Touch and hold a letter to enter the small number or symbol at the top of it.
To enter several numbers or symbols, tap .
- **Double letters:** Circle a letter to enter two of them.
- **Capital letters:** Tap  or drag it to the letter you want to capitalize.
- **Special characters:** Touch and hold a letter to choose from other special characters.
- **Word prediction:** While you're typing, word suggestions appear above the keyboard. Tap one to select it.
- **Voice entry:** Tap  on the touchscreen keyboard, then say what you want to type. You can speak as long as you like, pause whenever you want, and dictate punctuation.
- **Vibrate:** Don't like the vibrating keys when you type? Tap Apps  →  **Settings** → **Language & input** → **Google Keyboard** → **Preferences**.



Menu

More



Back

Next





Type

Type

Quick start: Type
Text entry settings & dictionary
Cut, copy & paste



Menu



Back

More



Next



Text entry settings & dictionary

Choose your keyboard style and edit the dictionary of words your phone suggests:

Find it: Apps  →  **Settings** → **Language & input**

- To choose your touchscreen keyboard, tap **Current Keyboard**. To allow voice entry from the keyboard, tap **Google voice typing**.
- To change the preferences for your keyboard, tap **Google Keyboard**.
- To add or edit the words that your phone suggests and recognizes, tap **Personal dictionary**.

Cut, copy & paste

Cut, copy, and paste names, phone numbers, addresses, quotes, or anything else in a text box.

- 1 To highlight a word, touch and hold it.
To highlight more words, drag the selector at the edge of the highlight.
- 2 Tap the icons to cut or copy.
Tip: Touch and hold icons to show labels.
- 3 Open the text box where you want to paste the text (even if it's in a different app).
- 4 Tap in the text box, then touch and hold to show the **PASTE** option. Tap **PASTE** to paste the text.



Organize

get it done anytime

Organize
Clock
Calendar
Corporate sync
Office network
Google Drive™
Print



Menu

More



Back

Next



Clock

Find it: Apps → **Clock** →

- **Alarm:** Tap . Tap an alarm to edit it, or tap to add a new alarm.

Tip: Pressing the volume button up or down while you're setting an alarm sets the volume level for that alarm.

When an alarm sounds, tap and drag to to turn it off, or drag to to snooze for ten minutes.

 
- **Settings:** To change your alarm volume, snooze delay, or other settings, tap Menu → **Settings**.
- **Timer:** For a timer, tap .
- **Stopwatch:** For a stopwatch, tap .
- **World clock:** For other time zones, tap .

Tip: To find out what an icon means, touch and hold it. To set your current date, time, time zone, and formats, tap Apps → **Settings** → **Date & time**.

Calendar

See all your events, all in one place.

Find it: Apps → **Calendar**

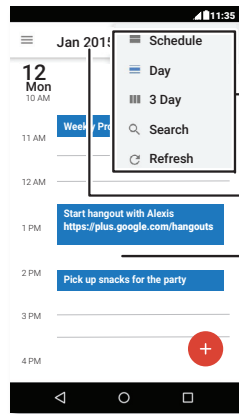

Calendar Menu

Jump to a different day.

Tap to add a new event.

- **Change the view:** Tap the month at the top to choose a date to view. Or tap Menu to choose **Day**, **3 Day** or **Schedule**.
- **Go to today's date:** Tap .
- **Add events:** Tap a time on the calendar and tap . Enter event details, then tap **SAVE**.



Organize

Organize
Clock
Calendar
Corporate sync
Office network
Google Drive™
Print



Menu





Back

More



Next





- **Show, edit, or delete events:** Tap an event to open it, then tap edit . Tap **DELETE** to remove the event.
- **Show, hide, or add calendars:** Tap  to show or hide calendars from your Google™ account. You can use a computer to add or remove calendars on your Google account at www.google.com/calendar.

Tip: Add a **Calendar** widget to your home screen. Touch and hold an empty spot on the home screen, tap **WIDGETS**, then touch and hold the **Calendar** widget.

Corporate sync

If you use Microsoft® Office Outlook on your work computer, your phone can synchronize email, events, and contacts with your Microsoft Exchange server.



- To add your **Corporate** account, see “**Email**”.
- To choose what to sync from your **Corporate** account, tap Apps  →  **Settings** → **Accounts**, tap your account, then check options like **Calendar**, **Contacts**, or **Email**.


Office network

To connect your office network with a Virtual Private Network connection, see “**Virtual Private Networks (VPN)**”.



Google Drive™

Keep all your photos, videos, documents, and more safely in one place—private unless you choose to share. Available on Google Drive from all your devices.

Find it: Apps  →  **Drive**

- To create a new file or folder, tap .
- To open a file, tap it.
- To edit a document, tap anywhere in the text to begin typing.

Print

To print your photos, documents, and more from your phone, check to see if your printer's manufacture has an app on Google Play. Then tap Apps  →  **Settings** → **Printing** to get started.

You can also send your photos, docs, and more to any Android device in your cloud or to Google Drive. Just download the Cloud Print app from Google.



Google Apps™

your world, your life, your friends

Google Apps™
Google Play™
Google Now™
Google+™
Play Games
Play Books

Google Play™

Google Play is a digital content experience from Google where you can find and enjoy your favorite movies, books, magazines, and Android apps and games.

- **Download apps:** Tap Apps (⋮) → **Play Store**.
- Find out more about **Google products:** See www.google.com/about/products.
- Log in or open a **Google account:** Visit www.google.com/accounts.
- **Google help:** See www.google.com/support.
- Access all of your files **in the cloud:** Check out **"Your cloud"**.

 
Google Now™

Google Now brings you just the right information at just the right time, before you even ask. Weather, traffic, transit schedules, even the latest scores come automatically, appearing throughout the day just as you need them.

To get started, touch and hold Home (○), then swipe up to the Google icon (Ⓞ).

To turn Google Now on/off, set your preferences, or learn more, open Google Now, tap ≡ → **Settings**.

Tip: When Google Now is on, swipe right from the home screen to see it.

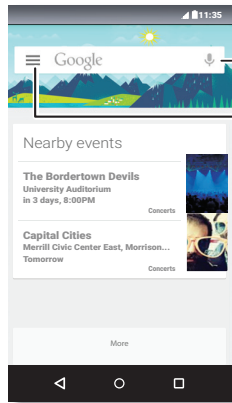

To ask Google a question or do a task, say "OK, Google," followed by your request.

Set reminders, customize or change settings.

Stuff that's important to you shows up here. Swipe right on a card to remove it.

Google+™

Google+ makes connecting on the web more like connecting in the real world. Share your thoughts, links, and photos with the right circles.

Find it: Apps (⋮) → **Google+**



Menu

More



Back

Next





Menu

More



Back

Next



- **Upload photos:** Tap Apps → **Gallery** and tap a photo or video. Choose → **Google+** and select your account.
- **Add a widget:** Use a widget to quickly read your Google+ posts. Touch and hold an empty spot on the home screen, tap **WIDGETS**, then touch and hold **Google+ Posts** to drag it to your home screen.
- **Help:** For more about Google+, visit www.google.com/+.
- **Other social networks:** You can also use Facebook®, Twitter, and more. Open Google Play to find the latest official apps and widgets.

Play Games

Check out your game achievements, play with your friends and pick up where you left off playing on another device.

Find it: Apps → **Play Games**

Tips & tricks

- **Challenge friends:** You can play against people in your Google+™ circles. Scroll down to **Players** and choose a person or tap **Add friends**.
- **Find more friends:** Scroll down to **Add players you know** and choose a person or tap **MORE**.

Play Books

Discover a new kind of library with Google powered recommendations from the world's largest collection of books, easy navigation, and the power of Google behind every page.

Note: You can buy books only in the U.S. and some countries.

Find it: Apps → **Play Books**

- **Shop:** To shop for books, tap Apps → **Play Books** → **Shop**.

Browse by category, or tap and search for a title or author. Tap a book to show details. Then, tap the book's price to buy it (or tap **OPEN** to open a free book). After you confirm a purchase, the book is added to your library.

- **Magazines and more:** Tap Apps → **Play Newsstand**.



Browse

explore & find

Browse

Quick start: Chrome™

Web connection

Downloads

Browser options

Safe surfing & searching



Menu

More





Back

 
Next



Quick start: Chrome™

Find it: Apps  →  Chrome



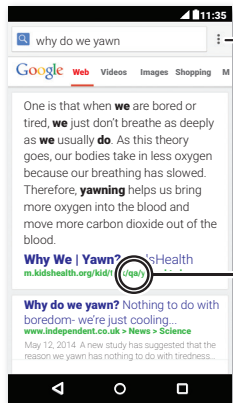




 
- **Go to a webpage:** Tap the address bar at the top of a page and enter an address.
- **Add a bookmark:** Open the address bar (drag down if you don't see it), then tap Menu  → ☆.
- **Open a bookmark:** Open the address bar, then tap Menu  → **Bookmarks**.



See options.

Tap a link to select it.
Touch and hold for more options.

Tips & tricks

- **Webpage shortcut:** To add a shortcut to a webpage on your home screen, when viewing the webpage, tap Menu  → **Add to homescreen**.
- **Internet search shortcut:** In the home screen, tap the Google search box at the top and enter a website address.
Note: If you can't connect, contact your service provider.
- **Mobile sites:** Some websites automatically show you a “mobile” version of their page—if you want to show the standard computer versions of all websites, tap Menu  → **Request desktop site**.
- **Reload:** If a page doesn't load correctly, tap Menu  → .
- **Tabs:** To open a new tab, tap Menu  → **New tab**. If you have more than one browser page open, tap Overview  to move from one to another.
- **Clear history:** In the browser, tap Menu  → **Settings** → **Privacy** → **CLEAR BROWSING DATA**. Then choose history, cache, cookies, and other options.
- **Help:** For more about Google Chrome, tap Menu  → **Help & feedback** or visit www.supportgoogle.com/chrome.

Web connection

To access the web, your phone uses your Wi-Fi network (or your mobile phone network if no Wi-Fi network is connected).

Note: Your service provider may charge to surf the web or download data over your mobile phone network.

To connect to a Wi-Fi network, see “**Wi-Fi networks**”.



Browse

Browse

Quick start: Chrome™

Web connection



Downloads





Browser options

Safe surfing & searching

Downloads


Warning: Apps downloaded from the web can be from unknown sources. To protect your phone and personal data from theft, download apps only on Google Play™.

To download a file, picture, or webpage, tap Apps  →  **Chrome** and go to the website:

- **Files:** Tap the download link. To show the file or app, tap Apps  →  **Downloads**.
- **Pictures:** Touch and hold it to choose **Save image**. To see the picture, tap Apps  →  **Gallery** → **Download**.









 



To download apps or phone updates, see “**Download apps**” or “**Update your phone**”.

Browser options

To change your browser security settings, text size, and other options, tap Menu  → **Settings**.

Safe surfing & searching

Keep track of what your browser and searches show:

- **Incognito:** To open a tab that won't appear in your browser or search history, tap Apps  →  **Chrome** → Menu  → **New Incognito tab**.
- **Clear history:** To clear your browser history and other saved information, tap Apps  →  **Chrome** → Menu  → **Settings** → **Privacy** → **CLEAR BROWSING DATA**.
- **Auto complete:** When you enter your name in an online form, your browser can automatically enter your address information. If you don't want that, tap Apps  →  **Chrome** → Menu  → **Settings** → **Autofill forms**, then tap the switch at the top to turn it off.
- **Pop-ups:** To stop pop-up windows from opening, tap Apps  →  **Chrome** → Menu  → **Settings** → **Content settings** → **Block pop-ups**.



Menu

More



Back

Next





Photos & videos

see it, capture it, share it!

Photos & videos

Quick start: Photos & videos

Take photos

Record videos

The perfect shot

View, share, & use photos & videos

Capture your screen

Play Movies & TV



Menu

More





Back

 
Next



Quick start: Photos & videos

Use the 13 megapixel camera to take crisp, clear photos with two twists of your wrist and a tap on the screen.

- **Launch it:** Even when your phone is asleep, open your camera with two twists of your wrist.
- **See it:** Swipe left for your photo gallery ( Gallery).
- **Share it:** View a photo or video from your gallery, then tap Share .

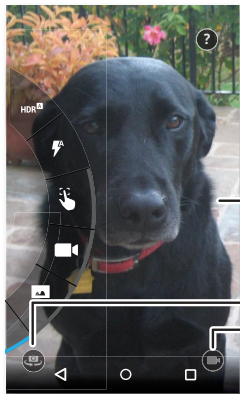

Tap anywhere to take the photo. Touch and hold for multiple shots.

Swipe right for effects and settings.

Switch to front camera.

Switch to video camera.

Tips & tricks

- **Quick Capture:** Tap Apps  →  **Camera**, swipe the screen right and tap  to turn Quick Capture on or off. When Quick Capture is on, twist your wrist twice to open the camera.
- **Take a selfie:** Tap  in the camera screen or twist your wrist to switch to the front camera.
- **Record a video:** Tap  in the camera screen to temporarily switch to the video camera and start recording. Then tap  to stop recording.
- **Capture a still shot during a video:** Tap anywhere on the screen while recording to save a photo.
- **View, share, or delete:** To open your gallery, swipe the camera screen left. Pick a photo or video. Choose  to share,  to delete, or Menu  for more options.
- **Change settings:** To open camera options, swipe the camera screen right. Rotate the dial to see more options.
- **Zoom:** Drag the camera screen up or down using one finger.
- **Multi-shot:** When you're ready, touch and hold the camera screen to take a burst of photos.
- **Panorama:** To take a panoramic shot, swipe the camera screen right to open settings, then tap . Use the on-screen guide to slowly pan your phone.
- **Crop:** To edit a photo, tap the photo to select it, then tap .
- **Print:** Want to print your photos? Check out **"Print"**.



Photos & videos

Photos & videos

Quick start: Photos & videos

Take photos

Record videos

The perfect shot

View, share, & use photos & videos

Capture your screen

Play Movies & TV


Take photos


Find it: Apps  →  **Camera**

Tap anywhere on the camera screen to take the photo.

Record videos

Find it: Apps  →  **Camera**, then tap 




The camera temporarily turns into a video camera and immediately starts recording. Tap  to stop recording.









Tip: To send a video in a text message, swipe the camera screen left to open your gallery, tap the video, then choose  to share.

The perfect shot

Point, tap, and you're done. But when you want something a little different, play with these camera options.

Tip: To open camera options, swipe the camera screen right. Rotate the dial to see more options.

Options	
 HDR	Turn on HDR (high dynamic range) effect for better pictures in challenging lighting situations, such as outdoors.
 Flash	Set On , Off , or Auto Flash .
 Control focus and exposure	Set the camera to focus on the object you tap in the screen. Turn the focus dial to adjust the exposure.

Options	
 Slow motion	Take a slow motion video.
 Panorama	Take a wide-angle shot. Use the on-screen guide to slowly pan while you are taking the photo.
 Timer	Set a timer to 3 seconds or 10 seconds.
 Location	Tag your photos with a location.
 Memory card	Store photos on a memory card, if you have one inserted.
 Resolution	Take a widescreen photo.
 Shutter tone	Turn the shutter click on or off.
 Quick Capture	Twist your wrist twice to turn camera on. Twist twice again to switch to front camera.



Menu

More



Back

Next





Photos & videos

Photos & videos

Quick start: Photos & videos

Take photos

Record videos

The perfect shot




View, share, & use photos & videos

Capture your screen

Play Movies & TV

View, share, & use photos & videos

Find it: Apps  →  **Gallery**

- **Play, share, or delete:** Tap a thumbnail to open it, then choose  to share,  to delete, or Menu  for more.


Tip: To select multiple files, open a folder, touch and hold a photo, then tap others.

- **Zoom:** Open a photo in your gallery, then drag two fingers apart or together on the screen.




Tip: Turn your phone sideways for a widescreen view.

- **Wallpaper or contact**

photo: Open a picture, then tap Menu  → **Set picture as**.

- **Edit:** Open a picture, then tap .



- **Slideshow:** Tap a picture, then tap Menu  → **Slideshow**. To stop the slideshow, tap the screen.

Tip: To show the slideshow on a television or other device, see **“Connect & transfer”**.

Capture your screen

Share a screen capture of your favorite playlist, your new high score, or a friend's contact information. If you can show it on your phone, you can share it with your friends.

To capture your phone's screen, press and hold both the Power and the Volume Down keys at the same time.

To see the screen capture, tap Apps  →  **Gallery** → **Albums** → **Screenshot**.



Menu

More



Back

Next





Play Movies & TV

movies & shows, wherever you go

Photos & videos

Quick start: Photos & videos

Take photos

Record videos

The perfect shot

View, share, & use photos & videos

Capture your screen

Play Movies & TV



Menu

More



Back

Next

 


Quick Start: Digital HDTV


Watch your favorite TV channels when you're away from home. To enhance your TV reception, plug in the antenna (included in the box).

Find it: Apps → **Mobile TV**

- **Record now:** To record the show you're watching, touch the screen, and then touch the record button .
- **Record later:** To schedule a recording, touch the screen, touch Menu → **Schedule**.



Change the channel or search for one.

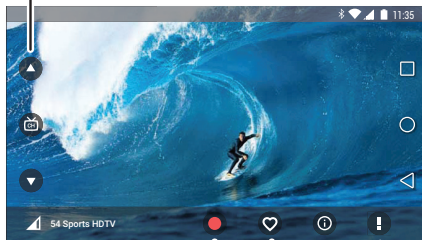 

Record a show.
Make a favorite.
Schedule, watch saved shows, and more.

Tips & tricks

- **Better reception:** To enhance your TV reception, plug in the antenna (included in the box).
- **Brightness and more:** Tap Menu → **Settings** to set options, like screen brightness, language, and sleep timer.

Play Movies & TV

Find and rent movies and TV shows to watch on your phone, tablet, or computer:

Find it: Apps → **Play Movies & TV**

To shop, rent, or watch on a computer, go to www.google.com/play and choose "Movies & TV".

YouTube™

Watch videos from YouTube users everywhere—or log in to your own.

Find it: Apps → **YouTube**



Play Music

when life needs a soundtrack

Play Music Quick start: Music

Quick start: Music

 
Music everywhere—stream it, buy it, save it, play it. Listen and create playlists anytime.

Note: You can buy music only in the U.S. and some countries.

Find it: Apps → **Play Music**

To get your music on Google Play™ using a computer, visit www.google.com/music.

Tap **Listen Now** to see recommendations and more.

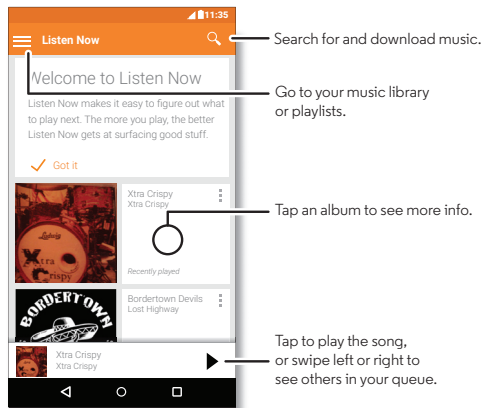

Menu



More



Back



Next

Tips & tricks

- **Volume:** Press the volume buttons.
- **Hide the music player:** To use another app while your music plays, tap Home . To return to the music player, swipe the status bar down and tap the song title.
Tip: You can also select **Next**, **Pause**, or **Previous** by swiping down the notification bar or using the controls on your unlock screen.
- **Home screen:** Control music playback from the home screen by adding the **Google Play Music** widget.
- **Shop:** Tap **Shop** to shop for more music. (If you don't see the Shop option, tap , then tap **Shop**.)
- **Playlists:** Tap Menu next to a song in your library to add it to a playlist or show other options. To edit, rename, or delete a playlist, touch and hold its name in the music library.
- **During a flight:** Swipe down the status bar with two fingers and tap to turn off all your network and wireless connections and listen to music during a flight.
- **File types:** Your phone can play MP3, M4A, AAC, AAC+, MIDI, and WAV files.
- **Radio:** For FM radio, plug in a headset or earbuds, then tap Apps → **FM Radio**.
Note: Copyright—do you have the right? Always follow the rules. See **“Content Copyright”** in your legal and safety information.



Locate & navigate



where you are, where you're going

Locate & navigate

Quick start: Locate & navigate

 
Quick start: Locate & navigate

Find a nearby cafe, get directions or step-by-step GPS voice navigation using the Google Maps™ you know and trust.




Find it: Apps  →  **Maps**

Enter what you want to find in the search bar, then tap it to see more information and options.

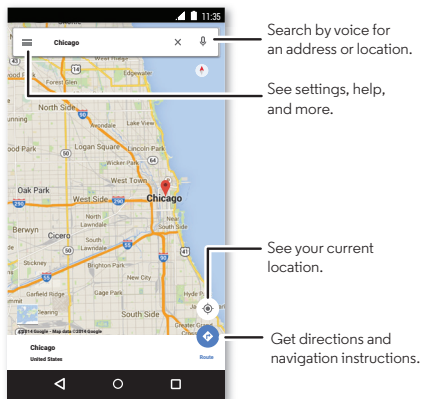Note: Your map screen may look different.



Tips & tricks

- **Find an address:** In the search field, enter an address or something you're looking for, like "restaurant." The map moves to show the address or local suggestions. Tap the address info at the bottom for more details.
- **Get directions:** Enter a place or address, then tap .
- **Save an address:** Tap the address info at the bottom of the screen and then tap **SAVE**.
- **Zoom:** To zoom in or out, drag two fingers together or apart on the screen.
- **Turn and tilt:** Rotate two fingers on the map to turn it, or drag down/up to tilt.
- **Share a location:** Tap a location, then tap the address and tap Menu  → **Share**.
- **Identify address:** Touch and hold a spot on the map to show the nearest address.
- **Get map help:** Tap  → **Help**.



Menu

More



Back

Next





Connect & transfer

wired up or wireless

Connect & transfer

Quick start: Connect & transfer

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode



Menu

More



Back

 
Next



Quick start: Connect & transfer

Connect accessories, computers, networks, and more.

Find it: Apps (☰) → ⚙️ **Settings**

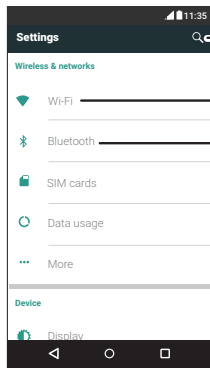

Can't find a setting?
Search for it.

Change Wi-Fi settings.

Change Bluetooth settings.

Tips & tricks

- **Quick settings:** Get to the most used settings quickly. Swipe down the status bar with two fingers. See “**Quick settings**”.
- **Bluetooth® devices:** To connect a Bluetooth headset, keyboard, or other device, tap **Bluetooth**.
- **Wi-Fi networks:** To connect, tap **Wi-Fi**.
- **Wi-Fi hotspot:** To make your phone a hotspot, check out “**Wi-Fi hotspot**”.
- **USB cable:** Your phone’s micro USB port lets you exchange media and other files with a connected computer. To change the type of USB connection, tap Apps (☰) → ⚙️ **Settings** → **Storage** → Menu (☰) → **USB computer connection**.
- **Automatic connections:** When Bluetooth or Wi-Fi power is on, your phone automatically reconnects to available devices or networks it has used before.
- **Airplane mode:** Need to shut down wireless connections quickly? Swipe down the status bar with two fingers and tap **Airplane mode**.
- **Print:** Want to print your photos, docs, or other things? Check out “**Print**”.



Connect & transfer

Connect & transfer

Quick start: **Connect & transfer**

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode



Menu

More




Back

Next



Bluetooth® wireless

Turn Bluetooth power on/off



Find it: Apps  →  **Settings** → **Bluetooth**, then tap the switch to turn it on


Note: Swipe down the status bar with two fingers to quickly turn Bluetooth on or off.


Tip: To extend battery life or stop connections, turn Bluetooth off when you're not using it.

Connect devices

The **first time** you connect a Bluetooth device, follow these steps:

- 1 Make sure the device you are pairing with is in discoverable mode (for details, refer to the guide that came with the device).
- 2 Tap Apps  →  **Settings** → **Bluetooth**.
- 3 Make sure the switch is on.
- 4 Tap a found device to connect it (if necessary, tap **Pair** or enter a passkey like **0000**).

Tip: Tap  to rename a device.

When the device connects, the Bluetooth status indicator shows at the top of the screen .

To automatically **disconnect** or **reconnect** a device anytime, like a wireless headset, just turn the device off or on.




Note: Using a mobile device or accessory while driving may cause distraction and may be illegal. Always obey the laws and drive safely.

Manage devices

To manually reconnect your phone with a paired device, tap the device name in the list.

To manually disconnect your phone from a paired device, tap the device name in the devices list, then tap **OK**.




 
To remove a paired device, tap  next to the device name, then tap **Unpair**.

To change the name your phone shows to other devices, tap Apps  →  **Settings** → **Bluetooth**, turn Bluetooth power on, then tap Menu  → **Rename phone**. Enter a name and tap **Rename**.

Let devices find your phone

To let a Bluetooth device discover your phone, just turn the Bluetooth switch on.

Transfer files

- **Photos or videos:** Open the photo or video, then tap  → **Bluetooth**.
- **Contacts:** Tap Apps  →  **Contacts**, tap a person, then tap Menu  → **Share** → **Bluetooth**.



Connect & transfer

Connect & transfer

Quick start: **Connect & transfer**

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode



Menu

More



Back

Next



Wi-Fi networks

Turn Wi-Fi power on/off

Find it: Apps  →  **Settings** → **Wi-Fi**, then tap the switch to turn it on

Connect to networks


To find networks in your range:


- 1 Tap Apps  →  **Settings** → **Wi-Fi**.

Tip: To show your phone's MAC address and Wi-Fi settings, tap Menu  → **Advanced**.

- 2 Make sure the Wi-Fi switch is turned on.

- 3 Tap a found network to connect it (if necessary, enter **Network SSID**, **Security**, and **Wireless password**, and tap **Connect**).

When your phone connects, the Wi-Fi status indicator  appears in the status bar.

Note: If you see a question mark in the Wi-Fi status indicator , swipe the status bar down, tap the network, and enter the network's password.

Tip: When Wi-Fi is on, your phone automatically reconnects to available networks it has used before. If a router previously had no internet connection, your phone will not automatically connect to it.

Wi-Fi hotspot

Note: This phone supports apps and services that may use a lot of data, so make sure your data plan meets your needs. Contact your service provider for details.

You can make your phone a Wi-Fi hotspot to provide portable, convenient internet access to other Wi-Fi enabled devices.

Note: Keep it secure. To protect your phone and hotspot from unauthorized access, it is strongly recommended that you set up hotspot security (WPA2 is the most secure), including password.

Find it: Apps  →  **Settings** → **More** → **Tethering & portable hotspot** and check **Portable Wi-Fi hotspot**

Note: These steps may vary depending on your network.

- 1 Your phone turns off Wi-Fi and uses the mobile network for internet access. Tap **Set up Wi-Fi hotspot** to set up security:

- **Network SSID:** Enter a unique name for your hotspot.
- **Security:** Select the type of security you want: **Open** or **WPA2**. For **WPA2**, enter a unique password that others will need to access your Wi-Fi hotspot.

Note: **WPA2** is recommended by IEEE.

- **Password:** Create a password with at least eight characters.

- 2 Tap **SAVE**.

When your Wi-Fi hotspot is active, other Wi-Fi enabled devices can connect by entering your hotspot's **SSID**, selecting a **Security** type, and entering the correct **Wireless password**.



Connect & transfer

Connect & transfer

Quick start: **Connect & transfer**

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode



Menu

More



Back

Next






Wi-Fi modes

For those who like to get a bit more technical, your phone supports the following Wi-Fi modes: 802.11b, g, n.

USB cables

Note: Copyright—do you have the right? Always follow the rules. See “**Content Copyright**” in your Legal Guide.

To load music, pictures, videos, documents, or other files from your computer, connect your phone to your computer with a USB cable. To change the type of USB connection (if necessary), tap Apps  →  **Settings** → **Storage** → Menu  → **USB computer connection**.

Tip: Make sure to connect the phone to a high power USB port. Typically, these are located directly on your computer.



Note: The first time you use a USB connection, your computer may indicate that drivers are being installed. Follow any prompts you see to complete the installation. This may take a few minutes.

- For Microsoft® Windows®: On your computer, choose Start, then select Windows Explorer from your list of programs. In Windows Explorer, your phone will appear as a connected drive (mass storage device) where you can drag and drop files, or it will appear as an MTP or PTP device that lets you use Windows Media Player to transfer files. For more instructions or driver files, visit www.motorola.com/support.
- For Apple™ Macintosh™: Use Android File Transfer, available at www.android.com/filetransfer.

Share your data connection

Your computer can access the internet through your phone's mobile network—you just need a USB cable.

Tip: To share a Wi-Fi connection, see “**Wi-Fi hotspot**”.

- 1 Connect your phone to your computer using a USB cable.
Note: If your computer is running something older than Microsoft® Windows® 7 or Apple™ Macintosh™ OS X, it might require special configuration.
- 2 On your phone, tap Apps  →  **Settings**, then make sure the **Wi-Fi** switch is set to off.
- 3 In **Settings**, tap **More** → **Tethering & portable hotspot**, then check **USB tethering** to start the connection.
To stop the connection, uncheck **USB tethering**, then disconnect your phone from your computer.

Data use

You can track the amount of data your phone uploads and downloads.

Find it: Apps  →  **Settings** → **Data usage**



Connect & transfer

Connect & transfer

Quick start: Connect & transfer

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

 
Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode

Your phone shows a data usage graph. Below the graph, apps appear from highest to least data usage. Apps that use a lot of data might also use a lot of battery power.

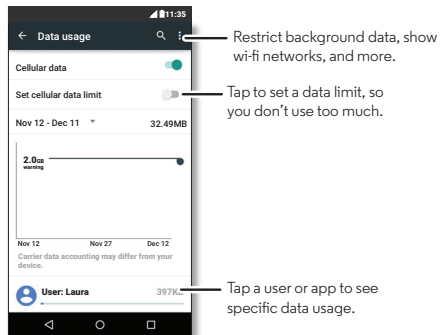

Restrict background data, show wi-fi networks, and more.

Tap to set a data limit, so you don't use too much.

Tap a user or app to see specific data usage.

Some apps transfer data in the background when you're not viewing them—to stop an app from doing this, tap it and then check **Restrict app background data**.

To turn off background data use for all apps, just tap Menu ⋮ → **Restrict background data**.

Note: Usage information is provided to help you manage your phone. This may not match the amounts charged by your service provider, as they're not measured in the same way.

Your cloud

One account with access to everything, everywhere—phone, tablet, computer.

Sync your Google account

When you log in to the same Google account, all devices can get to all the same apps, movies, books, and music from Google Play—plus you share the same Gmail, Google Calendar™, and Google Mobile™. To add accounts to your phone, tap Apps ⋮ → **Settings** → **Accounts**, then tap **+** **Add account** → **Google**.

Phone & tablet

Your Android phone and tablet can work together to help you get the most out of both:

- **Transfer media and files:** Copy files to your phone and transfer them to other devices—see **“Transfer files”**.
- **Phone hotspot:** If you have a Wi-Fi tablet, turn your phone into a Wi-Fi hotspot to let your tablet access the internet anywhere—see **“Wi-Fi hotspot”**.
- **Bluetooth® accessories:** If you have a Bluetooth keyboard or other accessories to use with your tablet, remember you can use them with your phone too. To connect them, see **“Bluetooth® wireless”**.



Menu

More



Back

Next





Connect & transfer

Connect & transfer

Quick start: **Connect & transfer**

Bluetooth® wireless

Wi-Fi networks

USB cables

Share your data connection

Data use

Your cloud

Phone & tablet

Memory card

Virtual Private Networks (VPN)

Mobile network

Airplane mode



Menu

More



Back

Next



Memory card



Your photos, videos, and other files are automatically stored in your phone's internal memory. You can set certain apps, like the camera, to store files on a microSD card.

Note: Your phone supports memory cards up to 32 GB.

Find it: Apps  →  **Settings** → **Storage** → **SD CARD**



Mount or unmount memory card

To mount a memory card, simply put it into your phone.

To unmount your memory card (so you can take it out of your phone), tap Apps  →  **Settings** → **Storage** → **Unmount SD card**.



Caution: Do not remove a memory card while your phone is using it or writing files to it.

Erase memory card content

To delete all the information (music, photos, and files) from your memory card, tap Apps  →  **Settings** → **Storage** → **Erase SD card**.

Virtual Private Networks (VPN)



A VPN lets you access files on a secured network (like an office network with a firewall). Contact the network administrator to ask for VPN settings, and any additional apps or other requirements.

To enter VPN settings, tap Apps  →  **Settings** → **More** → **VPN**. Tap **+** to add a new VPN. Choose the type of VPN and enter settings from the network administrator. The network is

stored in the **VPN** list so you can select it whenever you need to connect.

Mobile network

You should not need to change any network settings. Contact your service provider for help.

To see network settings options, tap Apps  →  **Settings** → **More** → **Cellular networks**.

Airplane mode

Use airplane mode to turn off all your wireless connections—useful when flying. Swipe down the status bar with two fingers, then tap **Airplane mode**.

Note: When you select airplane mode, all wireless services are disabled. You can then turn Wi-Fi and/or Bluetooth® power back on, if permitted by your airline. Other wireless voice and data services (such as calls and text messages) remain off in airplane mode. Emergency calls to your region's emergency number can still be made.



Protect

keep your phone safe

Protect

Quick start: Protect your phone

Screen lock

Screen pinning

SIM card lock

Encrypt your phone

Backup & restore

Reset

Stolen phone?



Menu

More



Back

Next



Quick start: Protect your phone

 
Make sure your information is protected in case your phone is lost or stolen.

Find it: Apps → **Settings** → **Security**

The easiest way to protect your phone is to use **Screen lock**. You can choose to swipe to unlock, or enter a pattern, PIN, or passcode to unlock your phone.

Screen lock

To keep your phone secure, you can make the touchscreen lock when it goes to sleep.

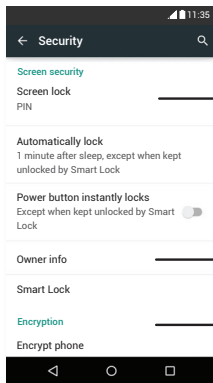

For a screen lock, you can use a pattern, password, or other option.

Add some info to show on your lock screen.

Encrypt the data stored on your smartphone.

Find it: Apps → **Settings** → **Security** → **Screen lock**, then select the lock type:

- **None:** Turn off the screen lock.
- **Swipe:** Tap and drag up.
- **Pattern:** Draw a pattern to unlock.
- **PIN:** Enter four to sixteen digits to unlock.
- **Password:** enter four to sixteen letters, digits, or symbols to unlock.

To change when your touchscreen goes to sleep, tap Apps → **Settings** → **Display** → **Sleep**.

Note: You can make emergency calls on a locked phone (see “**Emergency calls**”). A locked phone still rings, and you do not need to enter a PIN or password to answer a call.

Can't unlock?

Pattern, PIN, or password: If you forget your pattern, PIN, or password, you can enter your Google™ account email and password to unlock the phone.

If you don't have a Google account on your phone, contact your service provider to have your device factory reset.

Warning: A factory reset will delete all data on your phone.

Screen pinning

Need to keep an important screen handy, such as a boarding pass or shopping coupon? Pin the screen for easy access.

To set up screen pinning, tap Apps → **Settings** → **Security** → **Screen pinning**.



Protect

Protect

Quick start: Protect your phone

Screen lock

Screen pinning

SIM card lock

Encrypt your phone

Backup & restore

Reset

Stolen phone?



Menu



More



Back

Next





To pin a screen, open the app you want to pin, tap Overview , and scroll up. Tap .

To unpin the screen, tap Back  and Overview  at the same time.

SIM card lock

Caution: If you enter an incorrect SIM PIN code three times, your phone locks your SIM card and asks for your PIN unlock code. Contact your service provider for your PIN unlock code.



You shouldn't need to use this feature, but to set a SIM card PIN that you must enter when you turn on your phone, tap Apps  →  **Settings** → **Security** → **Set up SIM card lock** → **Lock SIM card**.

To set your SIM PIN, enter a 4-digit code. To change your code, choose **Change SIM PIN**.



Encrypt your phone

Caution: If you forget your encryption code, you cannot recover the data stored on your phone or memory card. Encrypting your files can take an hour or more. Leave your phone plugged in, and be careful not to interrupt the process.



Encryption protects the accounts, settings, apps, and files on your phone, so that people cannot access them if your phone is stolen.

You shouldn't need to use this feature, but to encrypt your phone and require a PIN or password whenever you turn on your phone, tap Apps  →  **Settings** → **Security** → **Encrypt phone**.

Backup & restore

Find it: Apps  →  **Settings** → **Backup & reset**, then tap the switch to turn it on

Your Google account data is backed up online. If you reset or replace your phone, just log in to your Google account to restore the contacts, events, and other details you synced with the account.

To choose what syncs with the account, tap Apps  →  **Settings** → **Accounts** → **Google**, tap your Google account, and check things to sync.

Note: Text messages, call logs, and items stored on your phone will not be restored. To restore your Google Play Store apps, see "**Take care of your apps**".

Reset

To reset your phone to factory settings and erase all the data on your phone, tap Apps  →  **Settings** → **Backup & reset** → **Factory data reset** → **RESET PHONE**.

Warning: All downloaded apps and user data on your phone will be deleted. Data in the cloud will not be deleted.

Stolen phone?

Your phone has Android Device Manager. You can remote lock or reset your device to protect your device from thieves. For details, see www.google.com/android/devicemanager.



Want more?

there's always more

Want more?
Get help & more
Troubleshooting

Get help & more

Get answers, updates, and info:

- **Help is here:** Tap Apps (☰) → **?** **Help** to get walk-through tutorials, how-tos, FAQs, or chat with people who can help, right on your phone.
- **Everything Moto G:** Get PC software, user guides, and more at www.motorola.com/mymotog.
- **Accessories:** Get accessories for your phone at www.motorola.com/mobility.
- **Get apps:** Tap Apps (☰) → **Play Store** to buy and download apps.
- **News:** Here's how to find us:
 - YouTube™ www.youtube.com/motorola
 - Facebook™ www.facebook.com/motorola
 - Twitter www.twitter.com/motorola
 - Google+™ www.google.com/+Motorola/posts

Tips

- **Interactive:** To get started quickly, tap Apps (☰) → **?** **Help** for interactive tutorials.
- **Google help:** In almost every Google app, you can tap Menu (☰) → **Help**. You can also view the Google Help Centers online at www.google.com/support.

Troubleshooting

We can help.

Crash recovery

In the unlikely event that your phone stops responding to touches and button presses, try a reboot—press and hold the Power button until the screen goes dark and your phone restarts.

Service & repairs

If you have questions or need assistance, we're here to help.

Go to www.motorola.com/support, where you can select from a number of customer care options. You can also contact the Motorola Customer Support Center at: 1-800-734-5870 (United States), 1-888-390-6456 (TTY/TDD United States for hearing impaired), or 1-800-461-4575 (Canada).



Menu

More



Back

Next





Copyright & Trademarks

Motorola Mobility LLC
222 W. Merchandise Mart Plaza
16th Floor
Chicago, IL 60654

www.motorola.com

Note: Do not ship your product to the above address. If you need to return your product for repairs, replacement, or warranty service, please contact the Motorola Customer Support Center at:

1-800-734-5870 (United States)

1-888-390-6456 (TTY/TDD United States for hearing impaired)

1-800-461-4575 (Canada)

Certain features, services and applications are network dependent and may not be available in all areas; additional terms, conditions and/or charges may apply. Contact your service provider for details.

All features, functionality, and other product specifications, as well as the information contained in this guide, are based upon the latest available information and believed to be accurate at the time of printing. Motorola reserves the right to change or modify any information or specifications without notice or obligation.

Note: The images in this guide are examples only.

MOTOROLA and the Stylized M Logo are trademarks or registered trademarks of Motorola Trademark Holdings, LLC. Google, Android, Google Play and other marks are trademarks of Google Inc. The Android robot is reproduced or modified from work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License. All other product or service names are the property of their respective owners.

© 2015 Motorola Mobility LLC. All rights reserved.

Caution: Motorola does not take responsibility for changes/modification to the transceiver.

Product ID: Moto G

Manual Number: 68017962001-A



Menu

More



Back

Next

